BEKO

COLOUR TELEVISIONS

Service Manual

CONTENTS **PAGE**

Safety Instructions	3
Technical Specifications	4
Pin Voltages of IC's	5
Pin Voltages of Some Transistors	8
Oscillograms	9
Electrical and Service Adjustments	12
Trouble Shooting Guide	16
Parts List	23
Circuit Diagram PIP Module	30
Circuit Diagrams	Attached

27/05/2002, Version 2

SAFETY INSTRUCTIONS

GENERAL GUIDELINES

1. It is advised to insert an isolation transformer in the AC supply before servicing a hot chassis.

2. Potentials as high as 33KV are present when this receiver is in operation. Operation of the receiver without the rear cover involves the danger of a shock hazard from the receiver power supply. Servicing should not be attempted by any one who is not competent with the precautions necessary when working on the high voltage equipment. Always discharge the anode of the tube.

3. When servicing observe the original lead dress in the high voltage circuits. If a short circuit is found, replace all the parts which have been overheated or damaged by the short circuit.

4. Always use the manufacturer's replacement safety components. The critical safety components marked with ⚠ on the schematics diagrams should not be replaced by other substitutes. Other substitute may create the electrical shock, fire or other hazards. Take attention to replace the spacers with the originals. Furthermore where a short circuit has occurred, replace those components that indicate evidence of overheating.

5. After servicing, see that all the protective devices such as insulation barriers, insulation papers, shields and isolation R-C combinations are correctly installed.

6. When the receiver is not being used for a long time of period of time, unplug the power cord from the AC outlet.

7. After servicing make the following leakage current checks to prevent the customer from being exposed to shock hazard.

LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs of the plug.

2. Turn the receiver's power switch on.

3. Measure the resistance value with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the receiver, such as screw heads, aerials, connectors, control shafts etc. When the exposed metallic part a return path to the chassis the reading should be between 4Mohm and the 20Mohm. When the exposed metal does not have a return path to the chassis, the reading must be infinite.

LEAKAGE CURRENT HOT CHECK

1. Plug the AC cord directly in to the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 2Kohm 10W resistor in series with an exposed metallic part on the receiver and an earth, such as a water pipe.
3. Use an AC voltmeter with high impedance to measure the potential across the resistor.
4. Check each exposed metallic part and check the voltage at the each point.
5. Reverse the AC plug at the outlet and repeat each of the above measurements.
6. The potential at the any point should not exceed 1.4 Vrms. In case a measurement is outside the limits specified, there is the possibility of a shock hazard, and the receiver should be repaired and rechecked before it is returned to the customer.

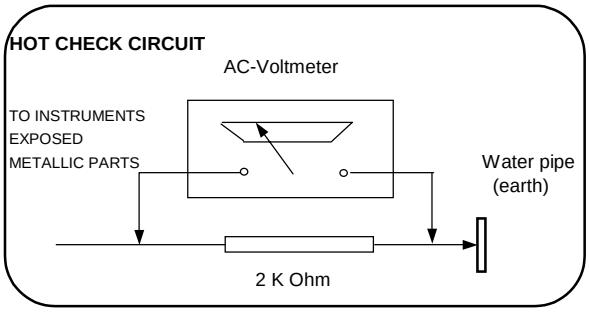

Figure 1

X-RAY RADIATION WARNING

The primary source of X-ray radiation in this receiver is the picture tube. The chassis is specially constructed to limit X-ray radiation. For continued X-ray radiation protection, replace the tube with the same type of the original one.

CAUTION

AFTER REMOVAL OF THE ANODE CAP, DISCHARGE THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR THE CARBON PAINTED ON THE CRT WITH A HIGH VOLTAGE PROBE AND MULTIMETER (SELECT VDC) AND THEN SHORT CIRCUIT DIRECTLY TO DISCHARGE COMPLETELY.

TECHNICAL SPECIFICATIONS

Power source:	220-240 VAC, 50-60Hz	
Power consumption (max.) [1]:	120 W	21" Pure Flat
	125 W	25", 28" Mono
	145 W	25", 28" 4/3, 29" Pure Flat
	140 W	29" Super Flat
	150 W	28" 16/9 Super Flat
	155 W	28" 16/9 Pure Flat, 32" Super Flat
	165 W	32" Pure Flat
	160 W	33"
Standby power consumption :	3 W	
Aerial impedance :	75Ohm, coaxial type	
Receiving system [2]:	PAL BG	
	PAL SECAM BG	
	PAL SECAM BG DK	
	PAL SECAM BG LL'	
	PAL I	
Receiving channels:	VHF BAND I ,	CH2-4
	VHF BAND III ,	CH5-12
	CABLE TV	S1-41
	UHF BAND	CH21-69
NTSC Playback Frequencies:	3.58&4.43 MHz	
Audio outputs :	Stereo :	2 x 10W RMS at %10 THD (Except 21" Pure Flat)
		2 x 7W RMS at %10 THD (21" Pure Flat)
		+ 20W RMS at %10 THD (if subwoofer available)
	Mono :	2 x 7W RMS at %10 THD
High Voltage :	28.5 ± 0.5 KV	25", 28"4/3
	29.0 ± 0.5 KV	28"16/9, 29", 32" Super Flat
	29.5 ± 0.5 KV	32" Pure Flat, 33"
Focus voltage :	%25.6 ± %38 of EHT	
Grid 2 voltage :	0-1400 V	
Heater voltage :	6.2 ± 0.2 Vrms	
Video/Audio Terminals :	AV1/2 IN	Video : 1 Vpp,75 Ohm
		Audio : 0.5 Vrms, >10 Kohm
	AV1 IN	RGB
	AV1/2 OUT	Video : 1 Vpp, 75 Ohm
		Audio : 0.5 Vrms, <1 Kohm
	AV2 IN (RCA)	Video : 1 Vpp, 75 Ohm
		Audio : 0.5 Vrms, >10 Kohm
Operating temperature :	0-45 Degrees	
Safety :	IEC 65 /BS P2N	
X-Ray radiation :	ACC. IEC 65/BS P2N	

[1] : 20W should be added to find the max. power consumption of the models with subwoofer.
[2] : TV set is produced to receive "one" of these colour and sound systems.

PIN VOLTAGES OF IC'S

IC101 (TDA956X H) TV signal processor-Teletext Decoder with embedded Micro Controller					
Pin	**Connection**	**V DC (*)**	**Pin**	**Connection**	**V DC (*)**
1	Volume +/-	3,2 (3,2)	**41**	Gnd for TV processor	0 (0)
2	Status 1	0 (0)	**42**	External CVBS input	0 (0)
3	Status 2	0 (0)	**43**	Gnd for TV processor	0 (0)
4	Digital ground for u-controller	0 (0)	**44**	SVHS-Y input	3.3 (0)
5	Not connected	0.75 (0.25)	**45**	SVHS-C input	0 (0)
6	Standby on/off	0.01 (3.9)	**46**	White stretch capacitor	3.4 (0)
7	Analog Gnd of text decoder and dig Gnd of TV processor	0 (0)	**47**	CVBS output	2.8 (0.07)
8	Secam PLL decoupling	2.3 (0)	**48**	Audio output/AM audio output	3.45 (0)
9	2nd supply voltage TV proc (8V)	8.0 (0.26)	**49**	2nd IF video output (not conn.)	
10	Supply volt.deccoup. of dig. Gnd of TV processor	5.0 (0)	**50**	2nd RGB / YUV insertion input	0.17 (0)
11	Phase 2 filter	2.73 (0)	**51**	Red input	2.6 (0)
12	Phase 1 filter	3.9 (0)	**52**	Green input	2.6 (0)
13	Gnd 3 for TV processor	0 (0)	**53**	Blue input	2.6 (0)
14	Decoupling bandgap	4.0 (0)	**54**	Beam current limiter input	2.6 -3.4 (0)
15	AVL (90 versions) / East/West drive signal (110 versions)	3.0 (0.5)	**55**	Black current input / V-guard input	4.6-5.7 (0)
16	V-drive B output	1.0 (0)	**56**	Red output	see oscilog.
17	V-drive A output	1.0 (0)	**57**	Green output	see oscilog.
18	IF-1 input	1.8 (0)	**58**	Blue output	see oscilog.
19	IF-2 input	1.8 (0)	**59**	Analog supply of text decoder and dig.supply of TV proc (3.3V)	3.3 (3.3)
20	Reference current input	3.9 (0)	**60**	OTP programming voltage	0 (0)
21	Vertical sawtooth capacitor	3.8 (0)	**61**	Dig. Supply to core (3.3V)	3.3 (3.3)
22	Tuner AGC output	4.3 (0)	**62**	X-tal Gnd	0 (0)
23	Sound IF input 1	1.9 (0)	**63**	X-tal input	
24	Gnd	0 (0)	**64**	X-tal output	
25	Gnd	0 (0)	**65**	Programming Reset (not connected)	0 (0)
26	Norrow band PLL filter	2.2 (0)	**66**	Dig. Supply to periphery (3.3V)	3.3 (3.3)
27	AVL (Automatic Vol. Levelling)	0.4 (0.08)	**67**	SCL1 (Eeprom)	3.3 (3.3)
28	Ext. Audio (audio 2) input	3.7 (0.08)	**68**	SDA1 (Eeprom)	3.3 (3.3)
29	Audio 3 input (not connected)	3.7 (0.09)	**69**	IR input	3.3 (3.3)
30	H-drive output	2.3 (0.26)	**70**	Not connected	
31	Sandcastle output-Hor.Fly.input	0.6 (0.25)	**71**	SCL	see oscilog.
32	Decoupling sound demodulator	2.0 (0)	**72**	SDA	see oscilog.
33	QSS intercarrier output / AM output	3.4 (0.3)	**73**	MSP reset (IC301)	4.9 (0)
34	EHT / overvoltage protection input	2.2 (0.08)	**74**	Mute	0 (3.3)
35	IF-PLL loop filter	2.4 (0)	**75**	SVHS switching	3.3 (3.3)
36	Sound IF AGC	0.5 (0)	**76**	L/L' switching	3.3 (3.3)
37	QSS output	0.6 (0)	**77**	F Blank MM Not conn.	3.3 (3.3)
38	IF video / selected CVBS output	3.0 (0)	**78**	Program +	3.3 (3.3)
39	main supply voltage TV processor	8.0 (0.25)	**79**	CVBS sync filter	3.3 (1.8)
40	Internal CVBS input	3.8 (0)	**80**	Program -	3.3 (3.3)

(*) Standby values are given in parenthesis

Note: The function of pin 15, 27, 33 and 48 is dependent on the mode of operation (mono intercarrier mode / QSS IF amplifier and East-West output or not) and is controlled by some software control bits.

IC 301 (MSP 3400G) MULTI STANDARD SOUND PROCESSOR

Pin	Connection	V DC	Pin	Connection	V DC
1	Not connected		33	Scart 2 sound output (R)	3.7
2	Gnd	0	34	Scart 2 sound output (L)	3.7
3	Gnd	0	35	Reference analog ground	0
4	Digital control input/output	0	36	Scart 1 sound output (R)	3.7
5	Digital control input/output	0	37	Scart 1 sound output (L)	3.7
6	Gnd	0	38	Volume capacitor Headphone	
7	Standby (in normal operation it must be high)	4.9	39	Analog Supply High Voltage (8V)	8
8	Not connected	4.9	40	Volume capacitor Speaker	
9	SCL	2.4-2.6	41	Ground for Analog Power Supply High	0
10	SDA	1.8-2.1	42	Internal Analog Reference Voltage	3.7
11	Not connected	2.4	43	Scart 4 input (L)	3.7
12	Not connected	2.4	44	Scart 4 input (R)	3.7
13	Not connected	2.4	45	Analog Shield Ground	0
14	Not connected	4.9	46	CINCH - sound input (L)	3.7
15	Not connected	0.7	47	CINCH - sound input (R)	3.7
16	Not connected	0.7	48	Analog Shield Ground	0
17	ADR Bus Clock Output	0.7	49	Scart 2 sound input (L)	3.7
18	Digital Circuitry Supply Voltage	4.9	50	Scart 2 sound input (R)	3.7
19	Digital Circuitry Supply Ground	0	51	Analog Shield Ground	0
20	Not connected	0.7	52	Scart sound 1 input (R)	3.7
21	Not connected (Ground)	0	53	Scart 1 sound input (L)	3.7
22	Not connected (Ground)	0	54	A/D converter ref. Voltage	2.5
23	Not connected (Ground)	0	55	Mono sound input	3.7
24	MSP RESET input	4.9	56	Ground for Analog Power Supply Voltage	0
25	Headphone sound output (R)	2.1	57	Analog Power Supply Voltage (5V)	4.9
26	Headphone sound output (L)	2.1	58	IF input 1	1.5
27	Reference analog ground	0	59	IF Common reference for IF IN1/IN2	1.5
28	Speaker output (R)	0.1-2.1	60	IF input 2	0
29	Speaker output (L)	0.1-2.1	61	Factory test mode enable (ground)	0
30	Not connected	0.1-2.1	62	Crystal oss. input	2.3
31	Not connected	0.1-2.1	63	Crystal oss. output	2.3
32	Not connected	0	64	Not connected (Ground)	0

IC303, IC304 (TDA7263) Audio Output IC

Pin	Connection	V DC	Pin	Connection	V DC
1	Left In	1.6	7		0,5-0,9
2	Left In V	1.6	8	Right out	14.2
3	Mute	15.3	9	VS	28
4	Right In V	1.6	10	Left out	13.9
5	Right In	1.6	11		0,5-0,9
6	Gnd	0	12	Left In	0.6

IC501 (TDA835X) Vertical Deflection Output IC

Pin	Connection	V DC	Pin	Connection	V DC
1	Input A	0,98 (0)	6	Vertical Flyback Supply Voltage	45,6 (10,9)
2	Input B	0.94 (0)	7	Output A	7,64 (0,1)
3	Supply voltage	14,7 (1.0)	8	Guard Output	0,3 (0)
4	Output B	7,55 (0,4)	9	Feedback Input	7,9 (0)
5	Gnd	0 (0)			

IC601 (MC44608 AP) Power Supply IC

Pin	Connection	V DC	Pin	Connection	V DC
1	Demag	0.85 (0.0)	5	Driver	2.1 (0.14)
2	I sense	0.1 (0.32)	6	VCC	12.3 (8.8)
3	Control input	5 (5.5)	7	Not connected	-
4	Gnd	0	8	VI	116 (117)

(*) Standby values are given in parenthesis

IC701 (TDA6107) RGB Output IC					
Pin	Connection	V DC	Pin	Connection	V DC
1	Red in	2.3-2.5	6	Vdd supply	190
2	Green in	2.5-2.7	7	Red out	134-137
3	Blue in	2.5-2.7	8	Green out	128-130
4	Gnd	0	9	Blue out	130-137
5	Black current output	4.5-5.5			

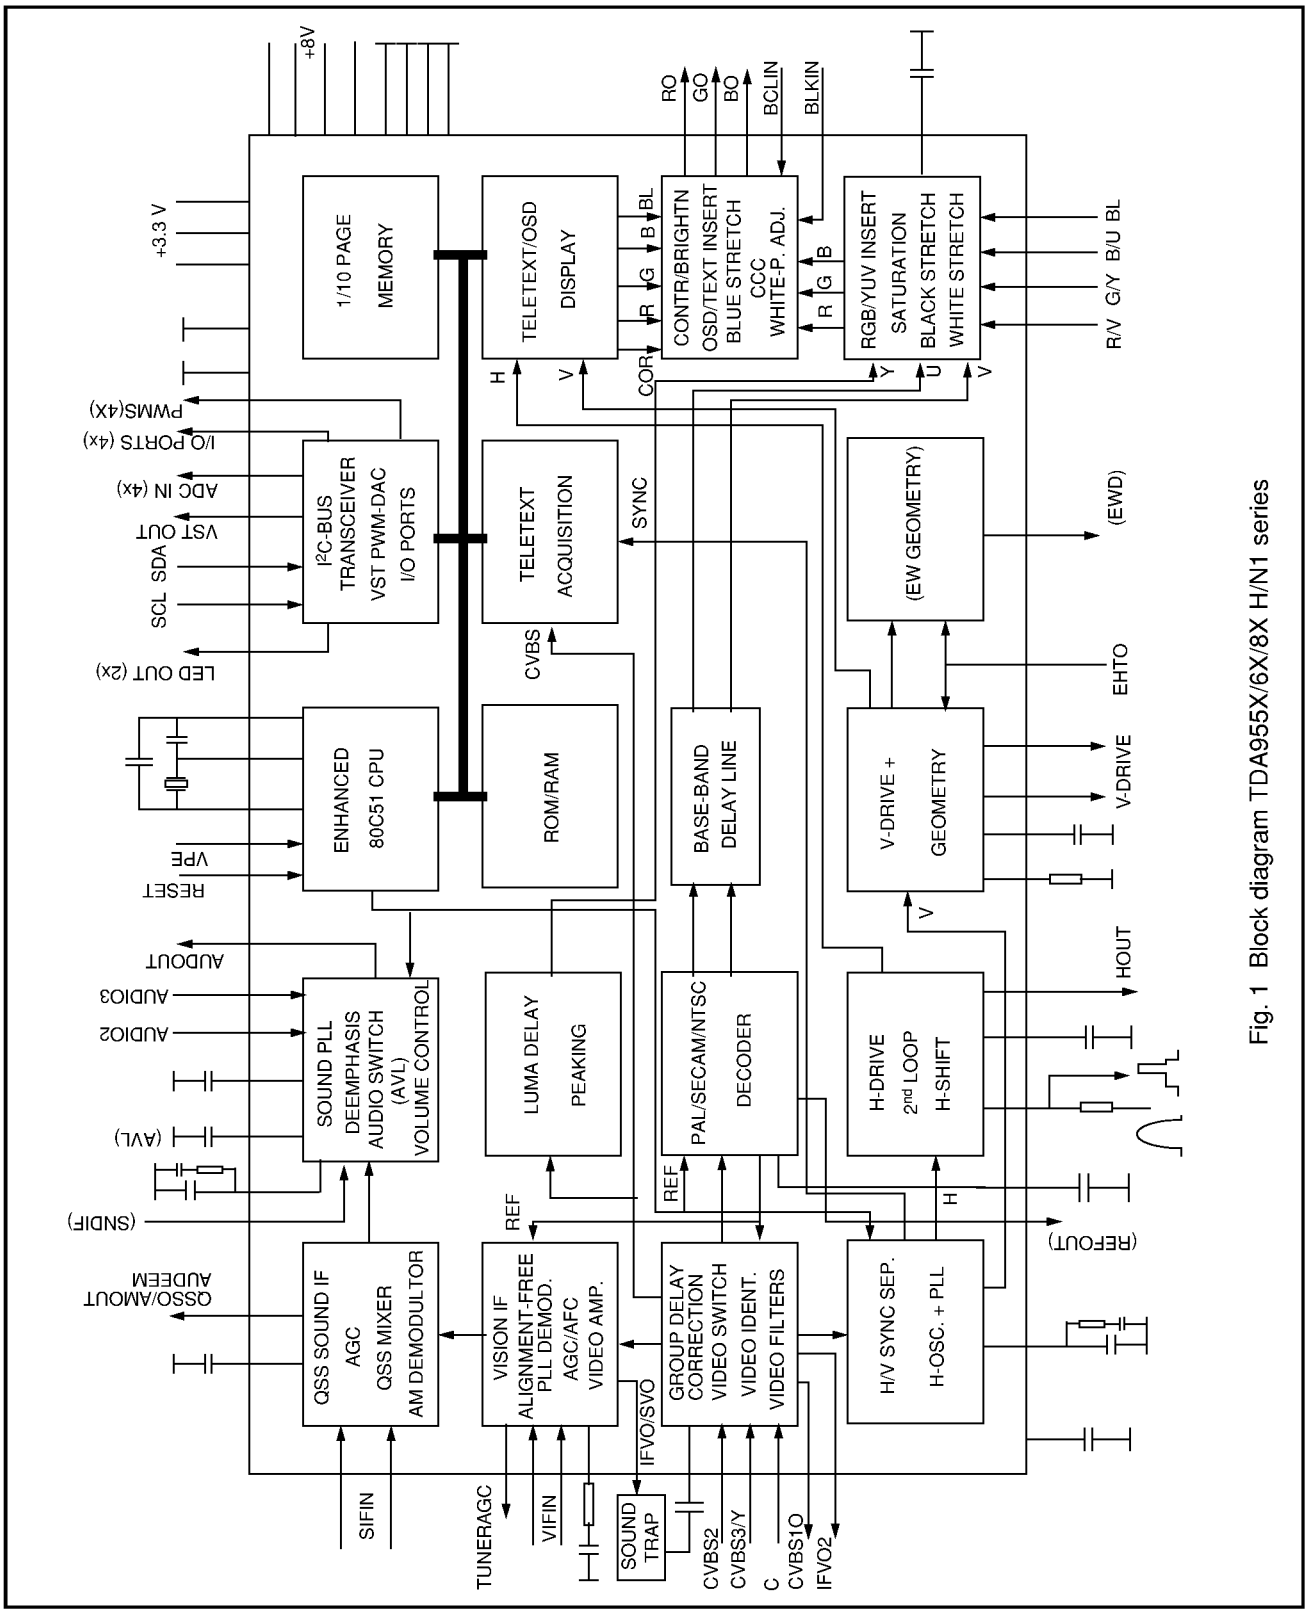

Fig. 1 Block diagram TDA955X/6X/8X H/N1 series

PIN VOLTAGES OF SOME TRANSISTORS

1. PH601 (PC127FY) PHOTOCOUPLER

Pin	Standby VDC	ON VDC
1	12.5	11
2	11.5	10
3	5.5	5
4	8.8	12.3

2. T603 (BC848) NPN

	Standby VDC			TV ON VDC		
	B	C	E	B	C	E
T603	0.6	0.02	0	0.1	0.3	0

3. T604 (BC848) NPN

	Standby VDC			TV ON VDC		
	B	C	E	B	C	E
T604	0.02	12.7	0	0.7	0.05	0

4. T605 (BC848) NPN

	Standby VDC			TV ON VDC		
	B	C	E	B	C	E
T605	0.6	0.02	0	0.1	0.7	0

5. T606 (BC848) NPN

	Standby VDC			TV ON VDC		
	B	C	E	B	C	E
T606	0.6	0	0	1	6.8	0

6. T607 (BC848) NPN

	Standby VDC			TV ON VDC		
	B	C	E	B	C	E
T607	0.6	0	0	0.1	2.5	0

7. T307 (BC848) NPN

	Standby VDC			TV ON VDC		
	B	C	E	B	C	E
T307	0.6	0	0	0.1	15	0

OSCILLOSGRAPHS OF SOME IC PINS

Note: TV is connected to a patern generator (Colour bar, sound 1 kHz).

1. IC101 (TDA956X)

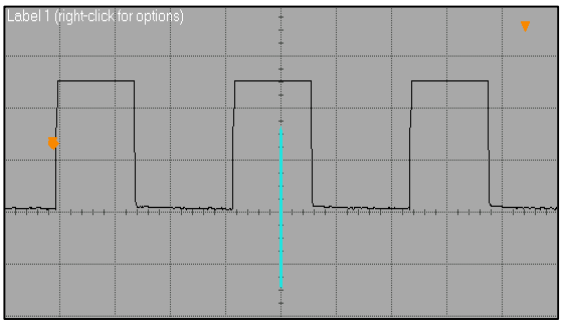

Pin 30

2V/div, 20 usn/div, Vpp=4.9 V, 15625 kHz

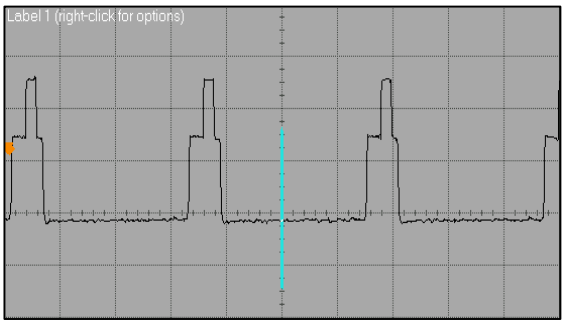

Pin 31

2V/div, 20 usn/div, Vpp=5.6 V, 15625 kHz

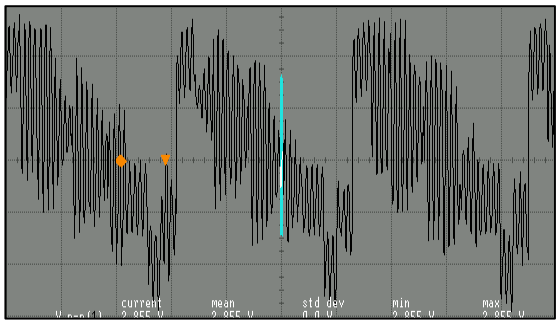

Pin 38

2V/div, 20 usn/div, Vpp=2.9 V, 15625 kHz

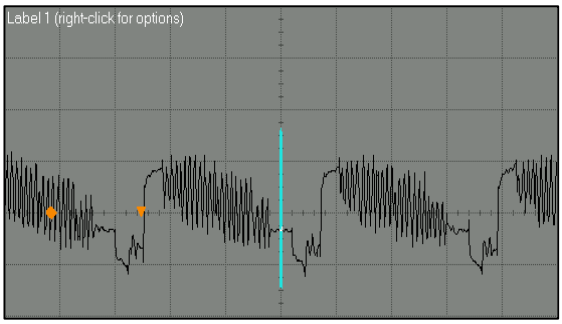

Pin 40

500 mV/div, 20 usn/div, Vpp=1.2 V, 15625 kHz

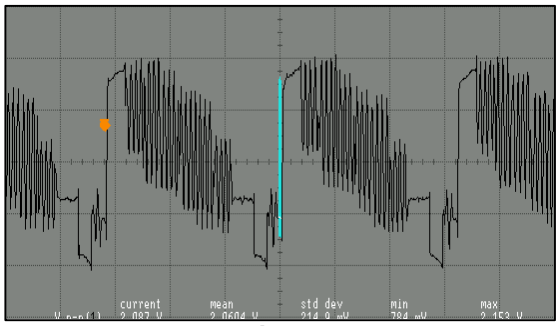

Pin 47

500 mV/div, 20 usn/div, Vpp=2.1 V, 15625 kHz

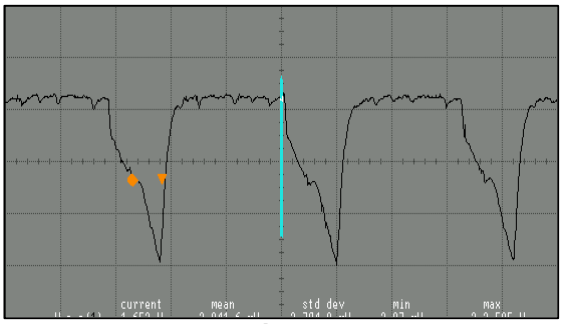

Pin 55

500 mV/div, 20 usn/div, Vpp=1.65 V, 15625 kHz

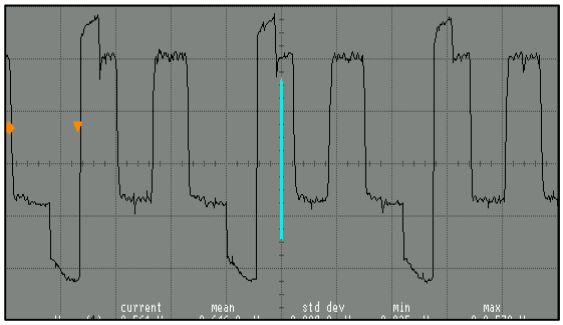

Pin 56

500 mV/div, 20 usn/div, Vpp=2.7 V, 15625 kHz

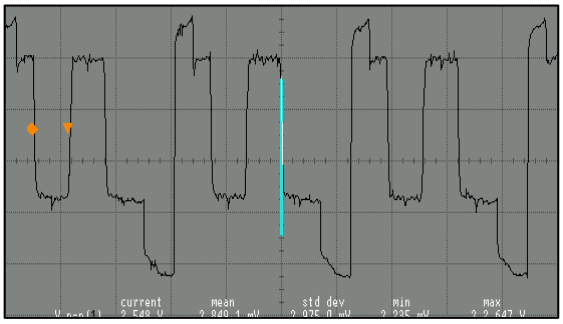

Pin 57

500 mV/div, 20 usn/div, Vpp=2.6 V, 15625 kHz

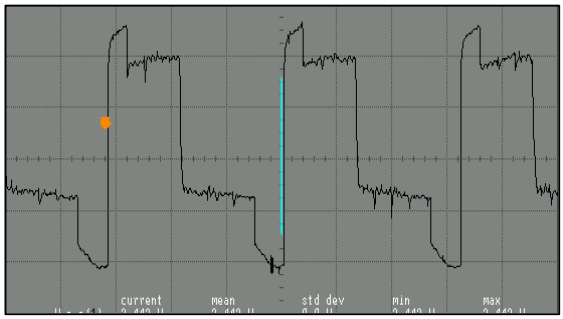

Pin 58

500 mV/div, 20 usn/div, Vpp=2.4 V, 15625 kHz

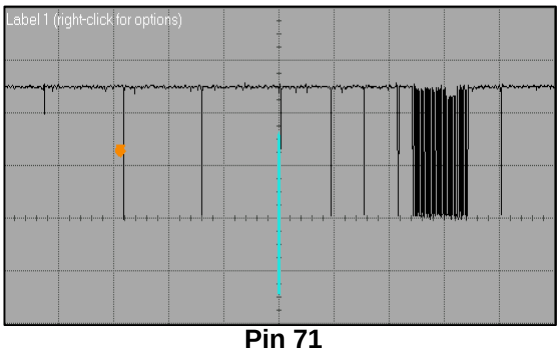

Pin 71

2 V/div, 1 msn/div, Vpp=5.2 V

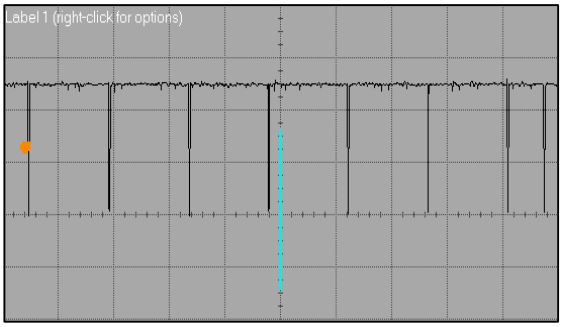

Pin 72

2 V/div, 1 msn/div, Vpp=5.2 V

2. IC301 (MSP34XX)

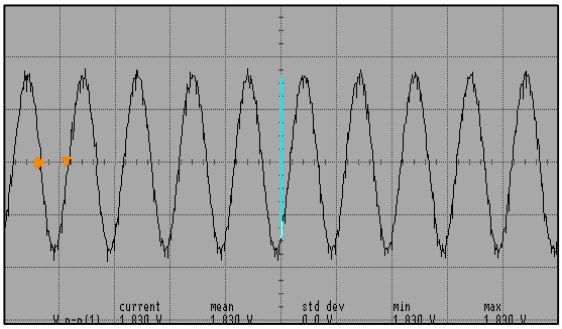

Pin 28

500 mV/div, 1 msn/div, Vpp=1.8 V

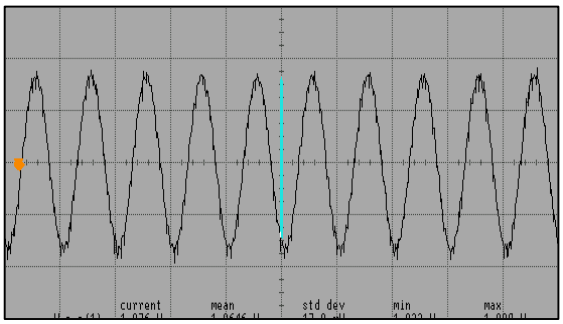

Pin 29

500 mV/div, 1 msn/div, Vpp=1.8 V

3. IC501 (TDA835X)

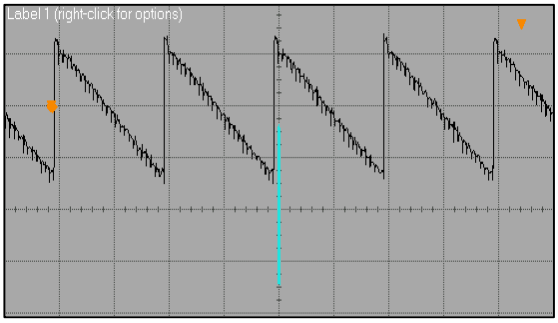

Pin 1

500 mV/div, 10 msn/div, Vpp=1.4 V, 50Hz

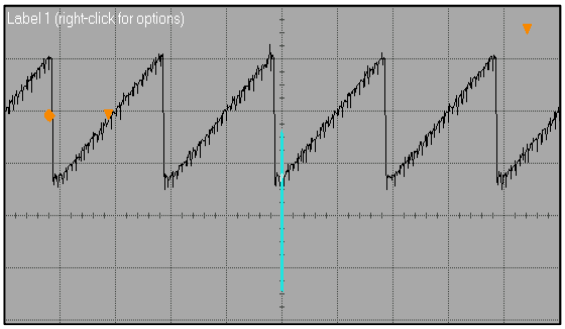

Pin 2

500 mV/div, 10 msn/div, Vpp=1.4 V, 50Hz

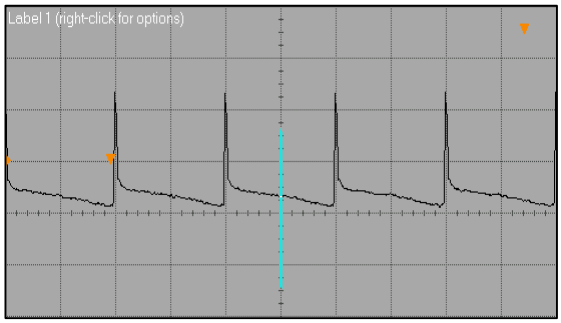

Pin 7

500 mV/div, 10 msn/div, Vpp=44.6 V, 50Hz

4. T501 (2SK2381)

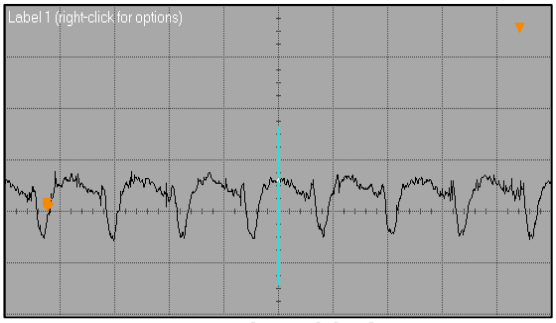

Gate (EW drive)

200 mV/div, 50 usn/div, Vpp=268 mV, 15625 Hz

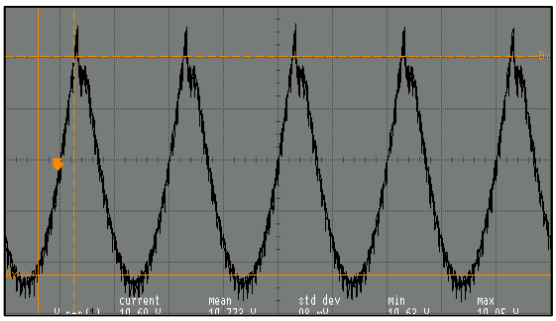

Drain (EW drive)

2 V/div, 10 usn/div, Vpp=10.7 V, 50 Hz

1. ELECTRICAL ADJUSTMENTS

1.1. Supply Voltage Adjustment

Connect a digital voltmeter to the cathode of diode D611 at the AV1 mode of the TV and set the screen voltage to the minimum with the screen potentiometer. Adjust the main supply voltage (B+) with P601 potentiometer to the following value (after adjustment, readjust Screen voltage).

21" Pure Flat	: 132 VDC
25"	: 145 VDC
28"	: 145 VDC (147 VDC for A66EAK071X11)
28" Pure Flat 16/9	: 140 VDC
28" Super Flat 16/9	: 140 VDC
29" Pure Flat	: 125 VDC
29" Super Flat	: 125 VDC
32" Pure Flat 16/9	: 140 VDC
32" Super Flat 16/9	: 131 VDC
33"	: 158 VDC

2. SERVICE ADJUSTMENTS

You need the special service remote control to enter and exit the service menu of the TV (you can order it from the manufacturer). All buttons of the Service RC are same with the user remote control, only service menu In / Out is added to it (please see the picture below).

Navigation

Service In/Out : Enters to / exits from the Service Menu
P+ / P- : Moves upward / downward inside the menu
V+ / V- : Changes the values or options

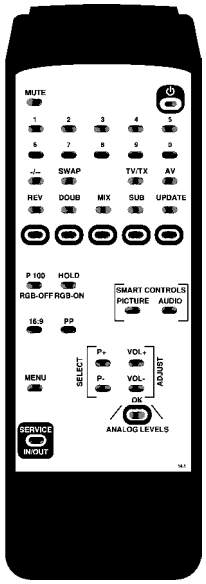

2.1. AGC Adjustment

- Apply an RF signal with amplitude 70±1 dBuV to the antenna input of TV with a pattern generator (switch sound carrier to Off and switch "Video Ext" to On).
- Switch on the Service Menu with the Service RC and find the AGC with P+ / P- buttons. Measure the 38.9 MHz signal on pin 11 (IF) of Tuner with an oscilloscope.
- Adjust "AGC" to get following values:
  PAL BG, PAL SECAM BG, PAL SECAM BG-DK, PAL I versions : 840 ± 20 mVpp
  PAL SECAM BG-LL version : 600 ± 20 mVpp
  PAL BG MONO, PAL SECAM BG MONO : 750 ± 20 mVpp
  PAL I MONO : 900 ± 20 mVpp
- Substract 5 from "AGC" value and change "TEST" to this value.
- Exit from the service menu with the Service RC.

2.2. Screen Adjustment

Adjustment is change according to SW versions. New SW versions start from SB8643_A05, SB8643_B04, SB8643_C04, SB8643_D04, SB8645_A05, SB8645_B04, SB8645_C03 and SB8645_D04.

- If CRT brand is Philips and SW is old version, then Set Brightness value to "00" in the Picture menu and store.
- Enter the Service Menu with the Service RC and select "SCRN" option with P+ / P- buttons and switch to ON with V+ / V- button.
  For new SW versions (or Philips CRT) "BRI 00" is shown on the screen.
  For old SW versions "BRI 32" is shown on the screen.
- Adjust the screen potentiometer to the level where the screen is just black.
- By pressing one of V+ / V- buttons, get the picture (SCRN is switched to Off).
- Exit from the Service menu.
- If CRT brand is Philips and SW is old version, Set Brightness value to "32" in the Picture menu and store.

2.3. Geometry Adjustments

- Apply a Cross Hatch Test pattern.
- Enter Service Menu with Service RC and select "VSLP" option with P+ / P- buttons (In this option, the upper half part of the pattern is shown and lower half part is blanked).
- Adjust VSLP such that middle line of the pattern is cut.
- For 16/9 sets, adjust VZOM to 25. On 4/3 sets, when VZOM is selected, set switches to 16/9 mode. In this case, adjust the circle of the pattern just touches to the upper and lower edges. Re adjust the VSLP if required.
- Adjust vertical position with VSHT, vertical linearity with SCOR and vertical height with VAMP.
- For 4/3 sets, adjust the horizontal amplitude with EWW.
  For 16/9 sets, adjust the 16/9 horizontal amplitude with EWW1 and 4/3 horizontal amplitude with EWW (EWW value is 21 lower than EWW1 value).
- For 16/9 sets, find the VZM1 option and adjust such that second lines from top and bottom just touches to the edges.
- Adjust horizontal centering with HSHT, parabola with EWPW and trapezium with EWT.
- For 4/3 sets, adjust the 16/9 general parabola with EWP1.
- Adjust the upper corner parabola with EWCU and lower corner parabola with EWCL, vertical parallelogram with HPAR, horizontal bow with HBOW.

For PIP versions : Select "PIP PRESS OK" and press "OK" button in the service menu. Adjust "HORPOS0" for horizontal shift of PIP window, "VERPOS0" for vertical shift of PIP window (press "POS" button to place PIP to the left-top corner), "HORPOS1" for 12-window PIP horizontal shift, "HORPOS2" for 11-window PIP horizontal shift, "HORPOS4" for right PIP horizontal shift.

2.4. White Balance Adjustment

- Enter the Service Menu with the Service RC and select "GRN" option with P+ / P- buttons and adjust it to "32" V+ / V- button.
- Adjust RED and BLUE for white balance. If white balance can not be adjusted properly change GRN value.
- Adjust BLOR and BLOG for red and green cut off.
- Exit from the Service menu.

2.5. Feature Options

Tuner	: Panasonic, Phillips, Sharp, Temic
STD	: STBY-On (Default, Automatic switch off is active), STBY-Off (can be used during repair)
Head	: Yes (Headphone available), No
SCRN	: Off, On (used for screen adjustment)
AV	: 01 (1 Scart), 03 (2 Scarts), 04 (2 Scarts + Front AV), 05 (2 Scarts + Front AV+ SVHS)
SSTD	: BG only, I only, BG+DK, BG + LL', All SYS
STYP	: NICAM On (available), NICAM Off
Toptext	: Yes (available), No
Fasttext	: Yes (available), No

TXT table : West (West Europe), East (East Europe), Cyrillic, Arabic, Hebrew, Greek
A type SW includes East, West, Greek. B type SW includes East, West, Cyrillic, Arabic.
C type SW includes East, West, Cyrillic, Hebrew. D type SW includes East, West, Cyrillic.
Hotel : On (Hotel Mode), Off (TV Mode)
Subwoofer : Yes (available), No
CRT : 4/3, 16/9
Peak1 : Yes (16/9 sets), No (4/3 sets)
AVV : Yes (Auto AV switching is active), No (Deactive).
PAL : Yes (PAL only versions), No (Other versions)
SAWF [1] : 01 (PAL BG, PAL-SECAM BG, PAL I or PAL-SECAM BG-DK without FTZ)
02 (SECAM LL' or PAL-SECAM BG-DK with FTZ)

[1] Available in only SW versions of Mono versions.

2.6. Factory Settings for Service Mode

1. Values given in Table 1 are typical values and can vary according to the CRT type.
2. PF means Pure Flat and SF means Super Flat.
3. The values in the table are decimal and shown in paranthesis on the OSD of TV.

		21" PF	25" 28"	28" 16/9 PF	28" 16/9 SF	29" PF	29" SF	32" 16/9 PF	32" 16/9 SF	33"
AGC	Automatic gain control	14	14	14	14	14	14	14	14	14
EEPE	Reset the eeprom, all values lost	00	00	00	00	00	00	00	00	00
PEAK	Peaking	32	32	32	32	32	32	32	32	32
GRN	Green level	32	32	32	32	32	32	32	32	32
RED	Red level	40	40	35	35	32	35	40	40	42
BLUE	Blue level	34	34	32	33	26	33	34	34	34
BLOG	Black level offset green	32	30	28	30	25	30	31	31	27
BLOR	Black level offset red	40	36	41	40	33	40	41	41	37
YDLY	Luminance delay	04	04	04	04	04	04	04	04	04
SAT	Saturation	20	20	20	20	20	20	20	20	20
HUE	Sharpness	32	32	32	32	32	32	32	32	32
CON	Contrast	40	40	40	40	40	40	40	40	40
CDR	Cathode Drive Level	04	05	04	04	05	05	04	04	05
BRI	Brightness	32	32	32	32	32	32	32	32	32
EWT	East West Trapezium	28	28	17	24	28	27	24	24	26
EWCU	EW upper corner	40	32	22	14	32	39	07	07	27
EWCL	EW lower corner	55	32	48	38	38	42	22	22	37
EWPW	EW parabola width	04	17	08	08	14	12	12	12	20
HSHT	Horizontal shift	38	35	35	40	31	29	29	29	35
EWW	East West Width	60	60	37	36	55	57	39	39	62
VAMP	Vertical amplitude	48	46	42	42	43	45	45	45	48
SCOR	S correction	30	25	25	17	31	25	17	17	25
VSHT	Vertical shift	24	29	27	28	28	26	31	31	25
VSLP	Vertical slope	27	32	32	32	34	29	35	35	32
RGB [1)]	OSD brightness level	01	01	10	10	01	01	10	10	01
VZOM	Vertical zoom	39	39	39	39	39	39	39	39	39
PWLT	Peak white limiting	06	11	06	06	11	11	06	06	11
IFOF	Offset IF demodulator	32	32	32	32	32	32	32	32	32
HPAR	Horizontal parallelogram	48	32	32	32	32	32	32	32	32
HBOW	Horizontal bow	32	32	32	32	32	32	32	32	32
TEST	Added for EMC purposes (=AGC-5)	09	09	09	09	09	09	09	09	09
EWP1	16/9 EW parabola width (for only 4/3 sets)	02	08	05	05	09	09	05	05	13
EWW1	East West Width (for only 16/9 sets)	-	-	58	57	-	-	60	60	-
VZM1	Vertical Zoom (for only 16/9 sets)	-	-	58	59	-	-	59	59	-

Table 1

1) For old SW versions (see section 2.2) RGB value is "01". For new SW, RGB is "01" for 4/3 and "10" for 16/9 sets.

2.7 Software Versions

During exit from service menu, the software version and feature options (hexadecimal number) are shown on the screen. For example: SB8643_X05, C697H.

Stereo software versions of 14.2 are named as follows:
SB8643_X.. for TDA9563 (intercarrier)
SB8645_X.. for TDA9565 (QSS)

Mono Software versions are named as follows:
SC3325-X.. for TDA9555H (only QSS)

PIP Software versions are names as follows:
SB8963_X.. for TDA9563 (intercarrier)
SB8965_X.. for TDA9565 (QSS)

".." shows version number (for example 05).
"X" shows OSD language group.

OSD Languages per group are given below:

	GROUP A	GROUP B	GROUP C	GROUP D
1.	ENGLISH	ENGLISH	ENGLISH	ENGLISH
2.	GERMAN	FRENCH	GERMAN	RUSSIAN
3.	FRENCH	POLISH	TURKISH	SERBIAN
4.	ITALIAN	HUNGARY	SWISS	BULGARIAN
5.	SPANISH	SLOVAK	DANISH	ROMANIAN
6.	PORTUGAL	CZECH	NORWEGIAN	MACEDONIAN
7.	DUTCH	IRAN	FINNISH	CROATIAN
8.	GREEK	ARABIAN	HEBREW	SLOVENIAN

POWER SUPPLY DEFECTS (I)

Note:

1. All values in the diagrams are for 230 VAC mains supply.
2. Before replacing T601, check following components: R640, R604, R605, R609, C615.
3. Burst type standby mode was designed (Fixed frequency is 21.5 kHz for standby and 38.8 kHz for normal operation) . In standby the output voltages drop to about 1/10 of the normal operation values (except +12V which stays same), i.e. from +145V to 14.7V, from 15V to 1.1V, from 28V to 2.5V. In standby, Standby signal from IC101 is high. Then, T605 conducts, T604 blocks and thristor TH601 conducts. Therefore, +145 line which is now14.7V is connected to 12V. The regulation is done by ZD603 in standby and by ZD602 (TL431) in normal mode.

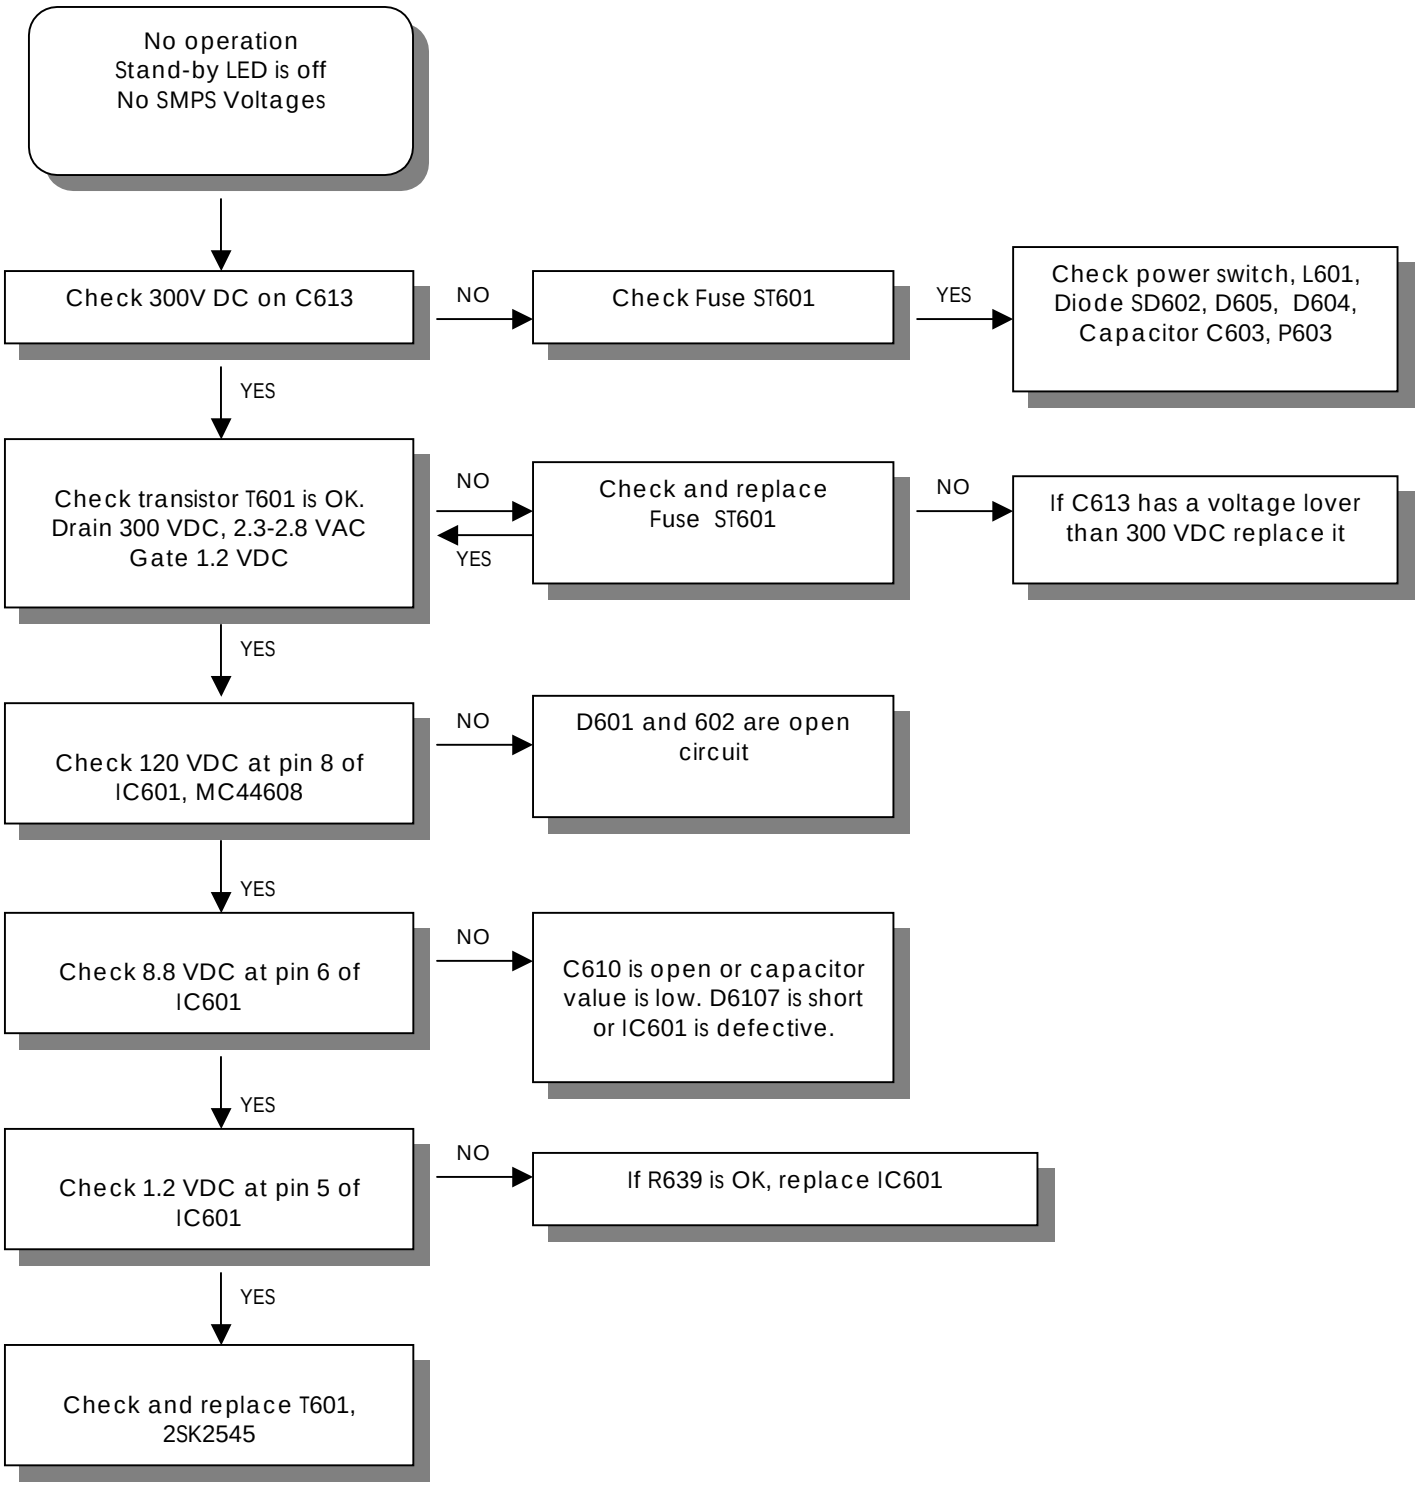
No operation
Stand-by LED is off
No SMPS Voltages
Check 300V DC on C613
NO
Check Fuse ST601
YES
Check power switch, L601, Diode SD602, D605, D604, Capacitor C603, P603
YES
Check transistor T601 is OK. Drain 300 VDC, 2.3-2.8 VAC Gate 1.2 VDC
NO
YES
Check and replace Fuse ST601
NO
If C613 has a voltage lover than 300 VDC replace it
YES
Check 120 VDC at pin 8 of IC601, MC44608
NO
D601 and 602 are open circuit
YES
Check 8.8 VDC at pin 6 of IC601
NO
C610 is open or capacitor value is low. D6107 is short or IC601 is defective.
YES
Check 1.2 VDC at pin 5 of IC601
NO
If R639 is OK, replace IC601
YES
Check and replace T601, 2SK2545

POWER SUPPLY DEFECTS (II)

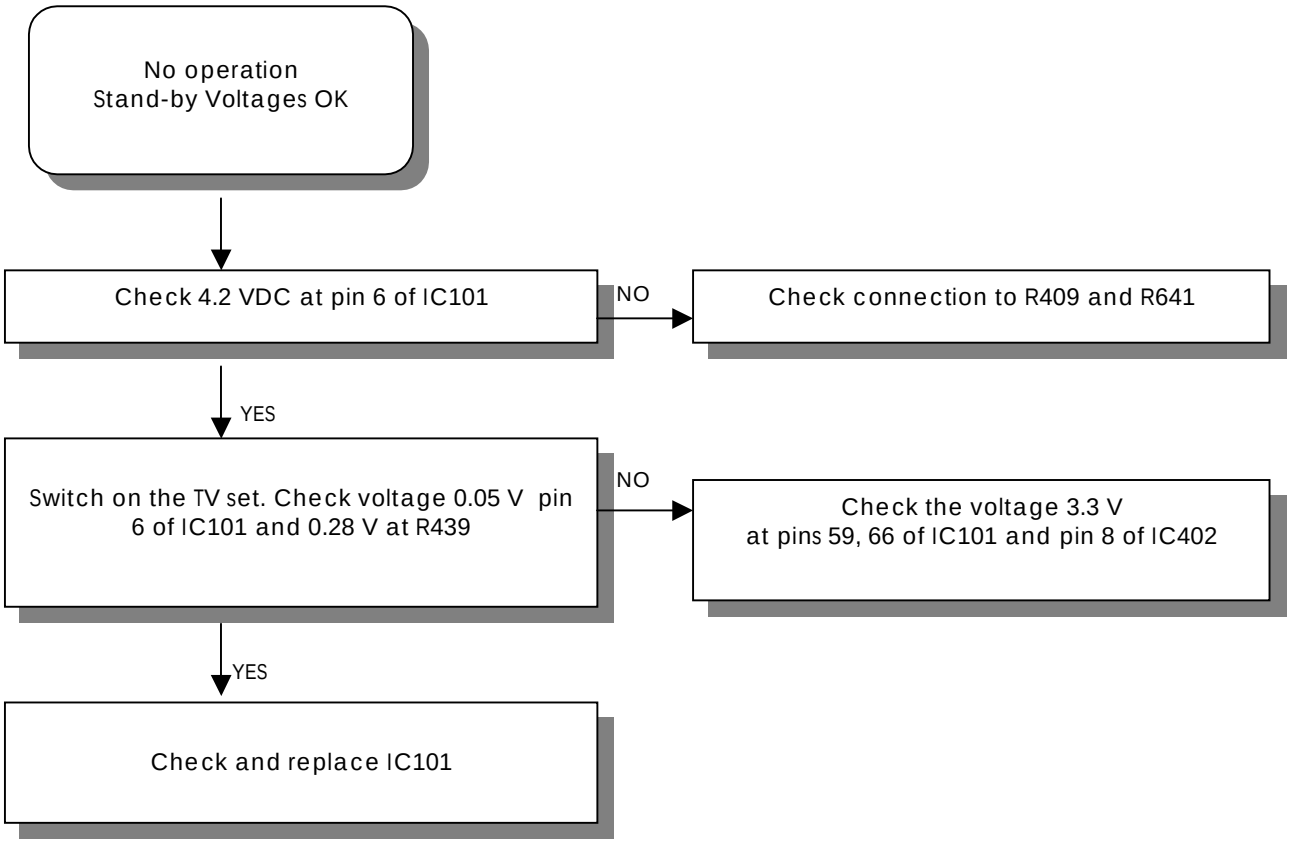
No operation
Stand-by Voltages OK
Check 4.2 VDC at pin 6 of IC101
NO
Check connection to R409 and R641
YES
Switch on the TV set. Check voltage 0.05 V pin 6 of IC101 and 0.28 V at R439
NO
Check the voltage 3.3 V at pins 59, 66 of IC101 and pin 8 of IC402
YES
Check and replace IC101

POWER SUPPLY DEFECTS (III)

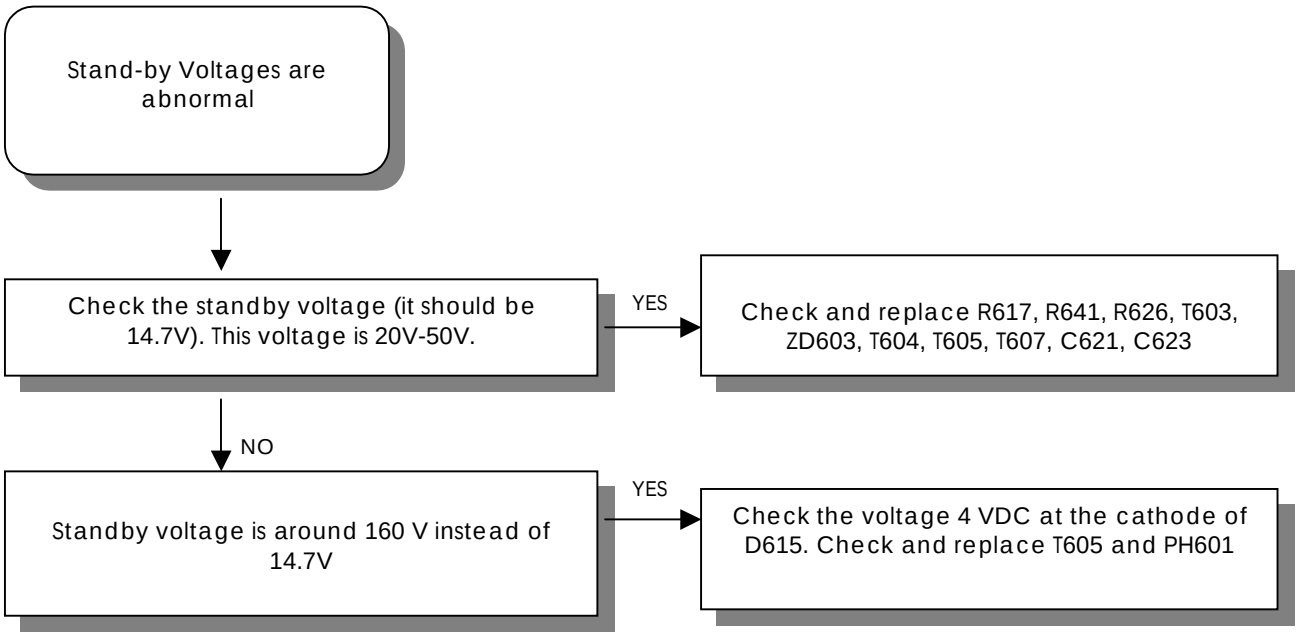
Stand-by Voltages are abnormal
Check the standby voltage (it should be 14.7V). This voltage is 20V-50V.
YES
Check and replace R617, R641, R626, T603, ZD603, T604, T605, T607, C621, C623
NO
Standby voltage is around 160 V instead of 14.7V
YES
Check the voltage 4 VDC at the cathode of D615. Check and replace T605 and PH601

POWER SUPPLY DEFECTS (IV)

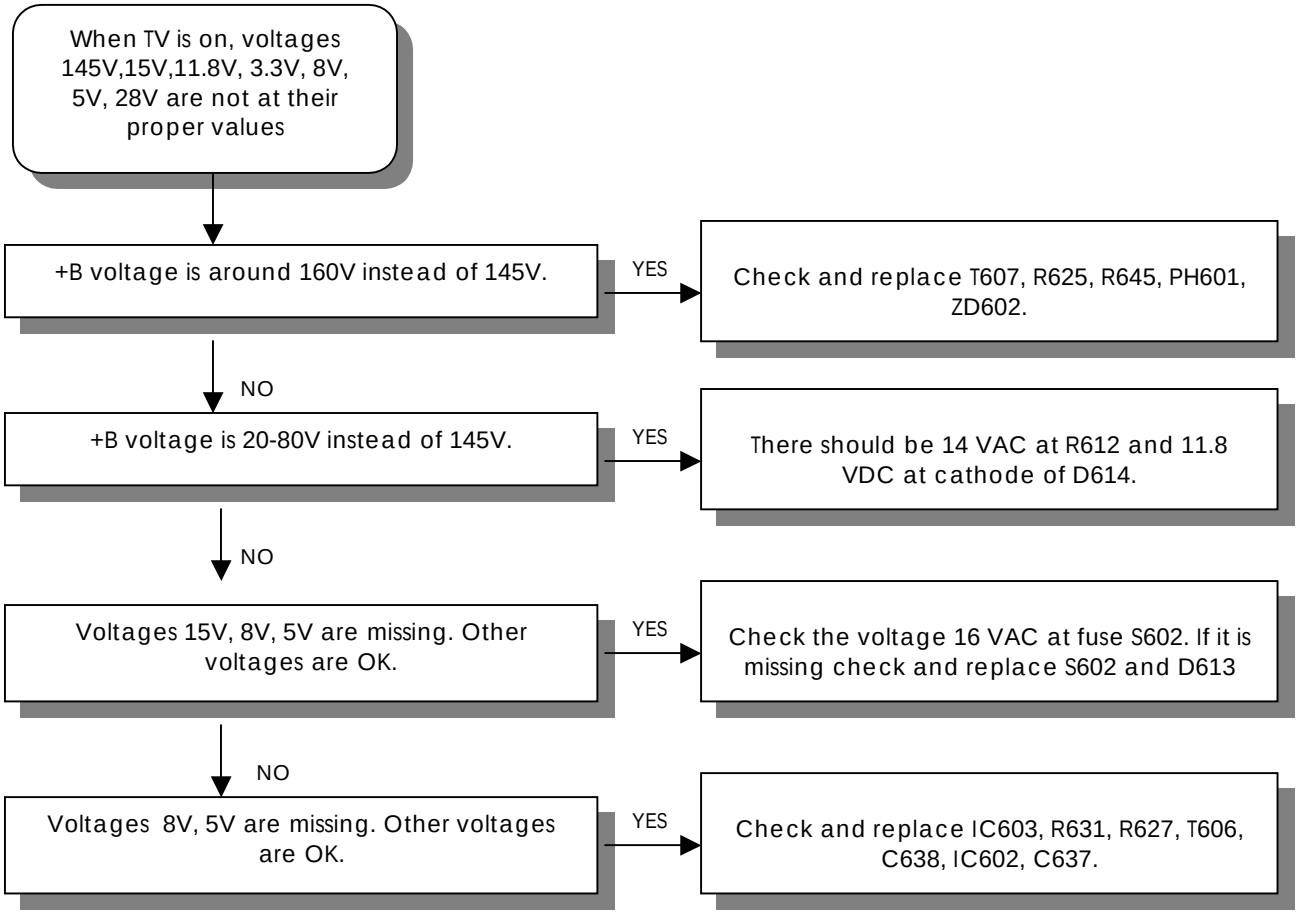
When TV is on, voltages 145V,15V,11.8V, 3.3V, 8V, 5V, 28V are not at their proper values
+B voltage is around 160V instead of 145V.
YES
Check and replace T607, R625, R645, PH601, ZD602.
NO
+B voltage is 20-80V instead of 145V.
YES
There should be 14 VAC at R612 and 11.8 VDC at cathode of D614.
NO
Voltages 15V, 8V, 5V are missing. Other voltages are OK.
YES
Check the voltage 16 VAC at fuse S602. If it is missing check and replace S602 and D613
NO
Voltages 8V, 5V are missing. Other voltages are OK.
YES
Check and replace IC603, R631, R627, T606, C638, IC602, C637.

PICTURE AND COLOUR DEFECTS

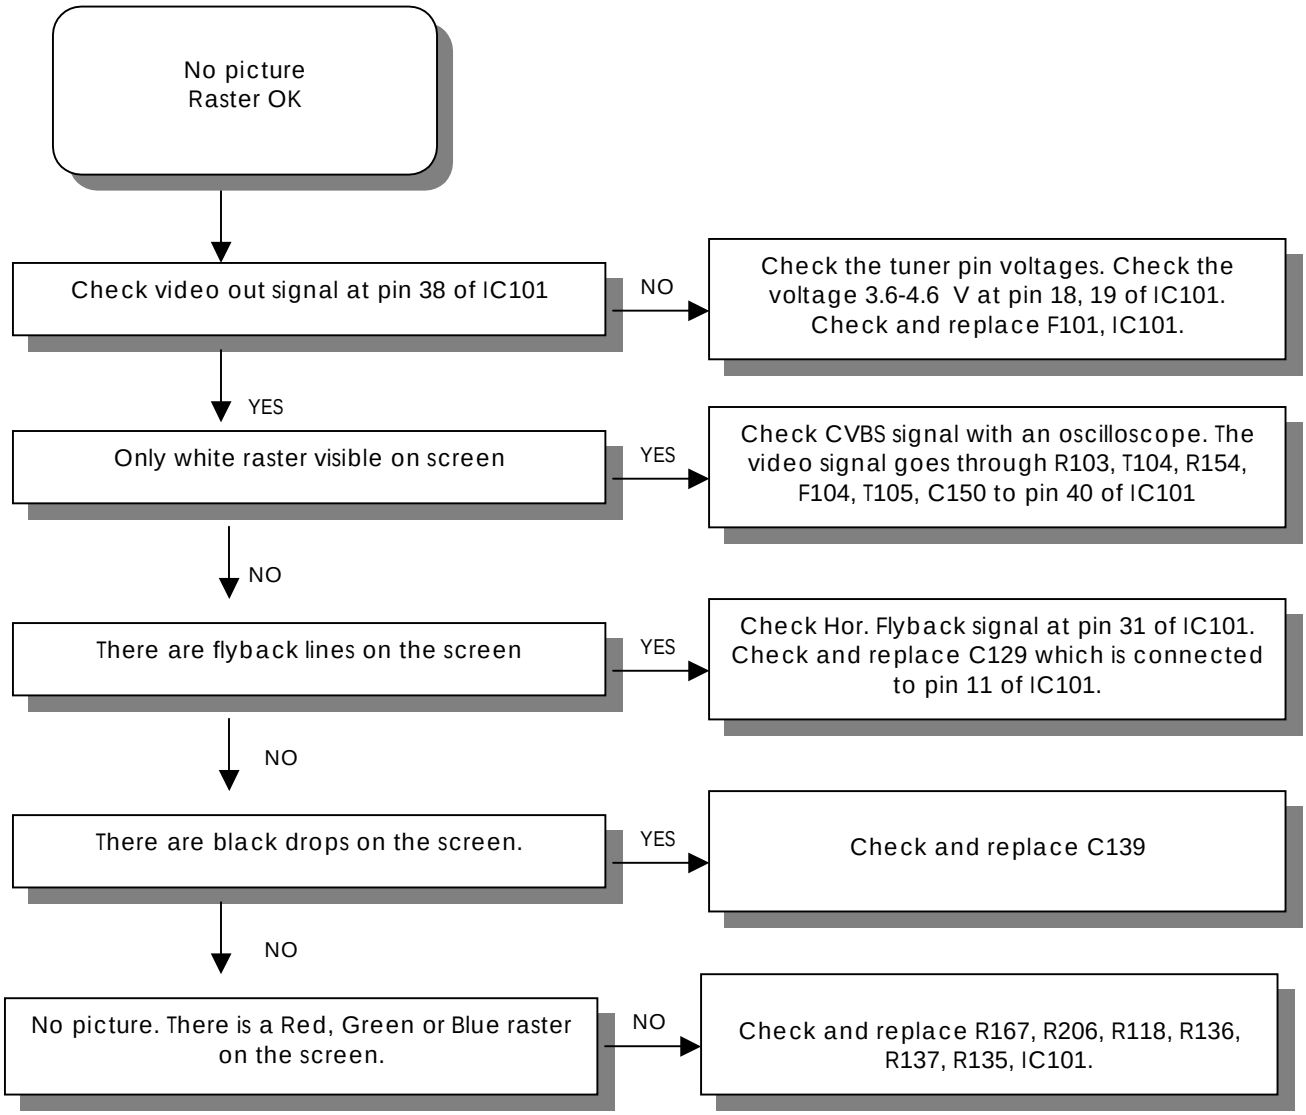
No picture
Raster OK
Check video out signal at pin 38 of IC101
NO
Check the tuner pin voltages. Check the voltage 3.6-4.6 V at pin 18, 19 of IC101. Check and replace F101, IC101.
YES
Only white raster visible on screen
YES
Check CVBS signal with an oscilloscope. The video signal goes through R103, T104, R154, F104, T105, C150 to pin 40 of IC101
NO
There are flyback lines on the screen
YES
Check Hor. Flyback signal at pin 31 of IC101. Check and replace C129 which is connected to pin 11 of IC101.
NO
There are black drops on the screen.
YES
Check and replace C139
NO
No picture. There is a Red, Green or Blue raster on the screen.
NO
Check and replace R167, R206, R118, R136, R137, R135, IC101.

HORIZONTAL DEFLECTION CIRCUIT DEFECTS

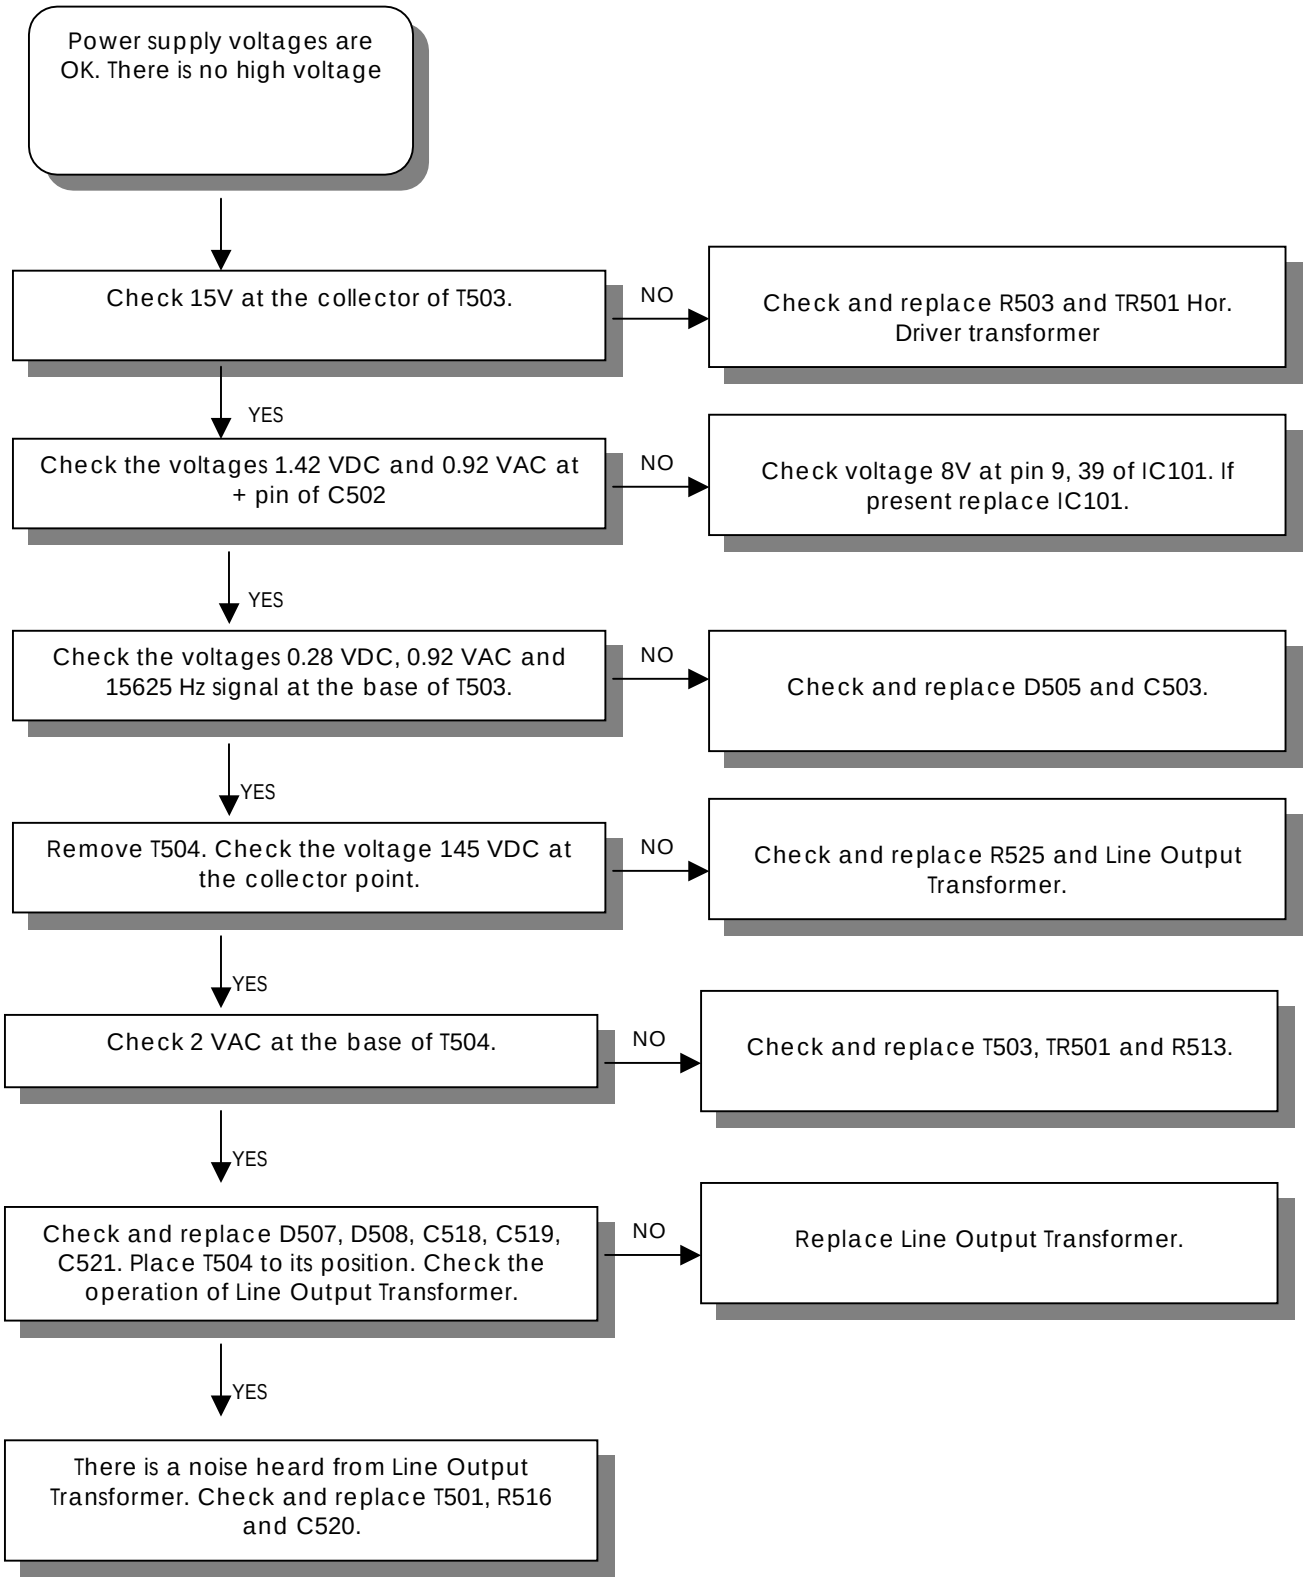
Power supply voltages are OK. There is no high voltage
Check 15V at the collector of T503.
NO
Check and replace R503 and TR501 Hor. Driver transformer
YES
Check the voltages 1.42 VDC and 0.92 VAC at + pin of C502
NO
Check voltage 8V at pin 9, 39 of IC101. If present replace IC101.
YES
Check the voltages 0.28 VDC, 0.92 VAC and 15625 Hz signal at the base of T503.
NO
Check and replace D505 and C503.
YES
Remove T504. Check the voltage 145 VDC at the collector point.
NO
Check and replace R525 and Line Output Transformer.
YES
Check 2 VAC at the base of T504.
NO
Check and replace T503, TR501 and R513.
YES
Check and replace D507, D508, C518, C519, C521. Place T504 to its position. Check the operation of Line Output Transformer.
NO
Replace Line Output Transformer.
YES
There is a noise heard from Line Output Transformer. Check and replace T501, R516 and C520.

VERTİCAL DEFLECTION CIRCUIT DEFECTS

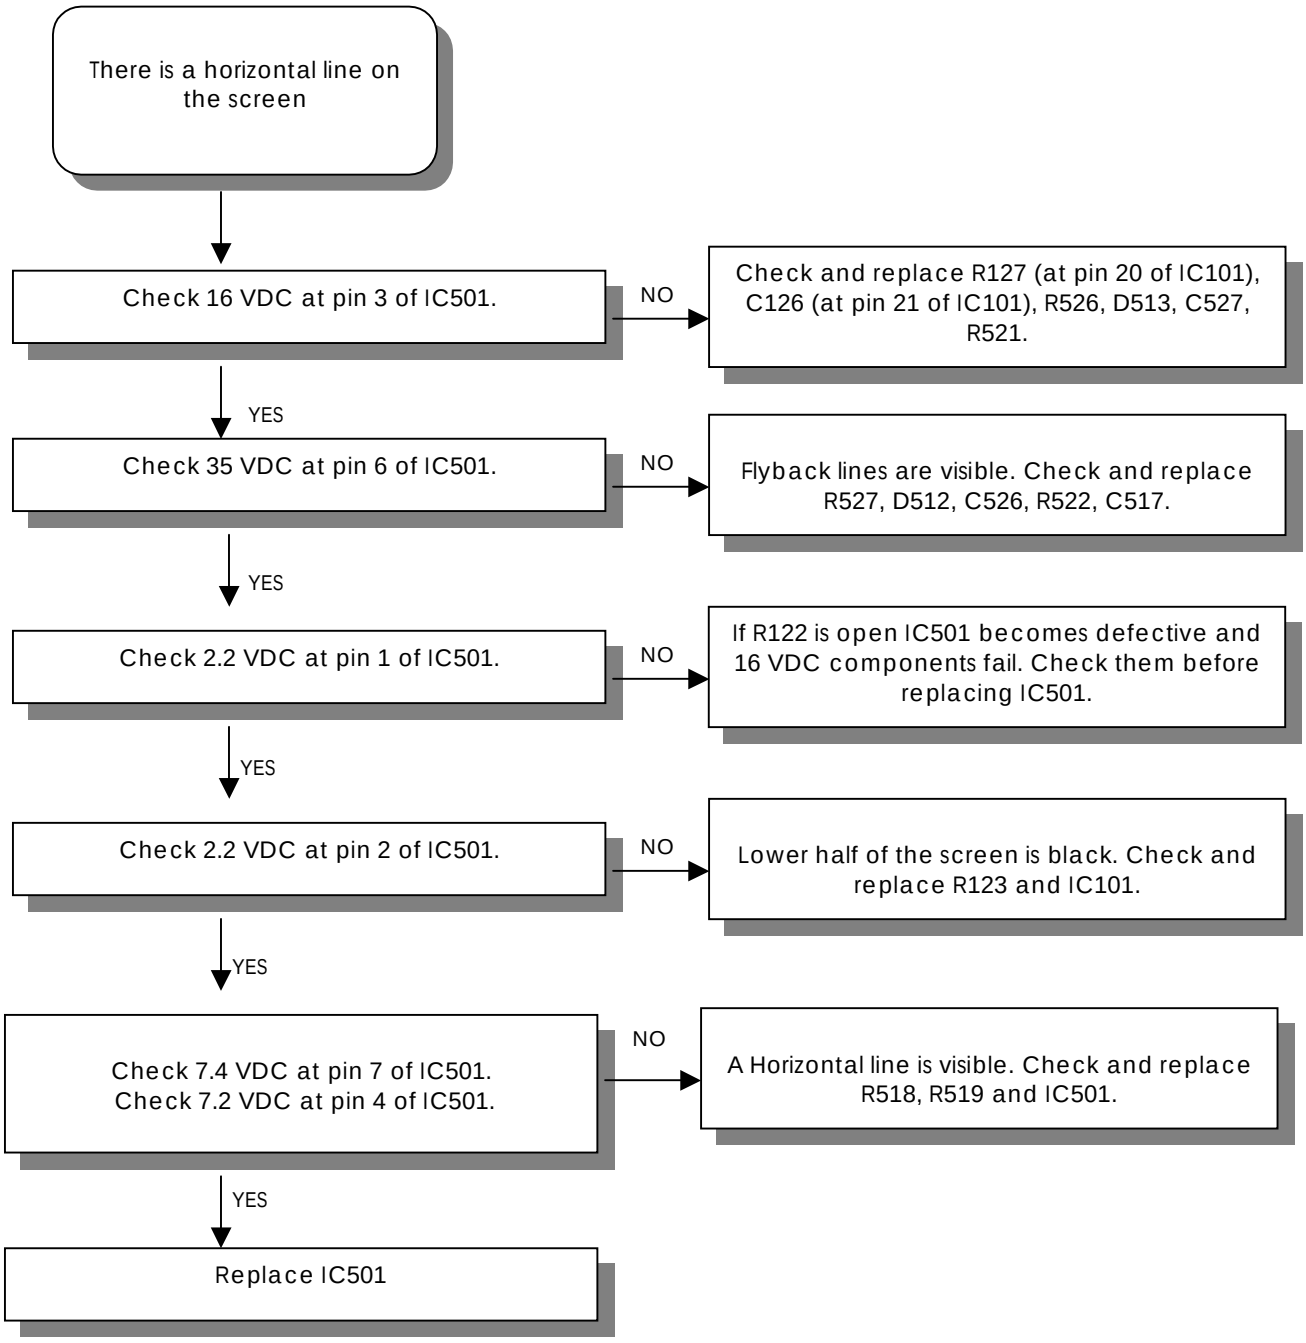
There is a horizontal line on the screen
Check 16 VDC at pin 3 of IC501.
NO
Check and replace R127 (at pin 20 of IC101), C126 (at pin 21 of IC101), R526, D513, C527, R521.
YES
Check 35 VDC at pin 6 of IC501.
NO
Flyback lines are visible. Check and replace R527, D512, C526, R522, C517.
YES
Check 2.2 VDC at pin 1 of IC501.
NO
If R122 is open IC501 becomes defective and 16 VDC components fail. Check them before replacing IC501.
YES
Check 2.2 VDC at pin 2 of IC501.
NO
Lower half of the screen is black. Check and replace R123 and IC101.
YES
Check 7.4 VDC at pin 7 of IC501.
Check 7.2 VDC at pin 4 of IC501.
NO
A Horizontal line is visible. Check and replace R518, R519 and IC501.
YES
Replace IC501

AUDIO DEFECTS (I)

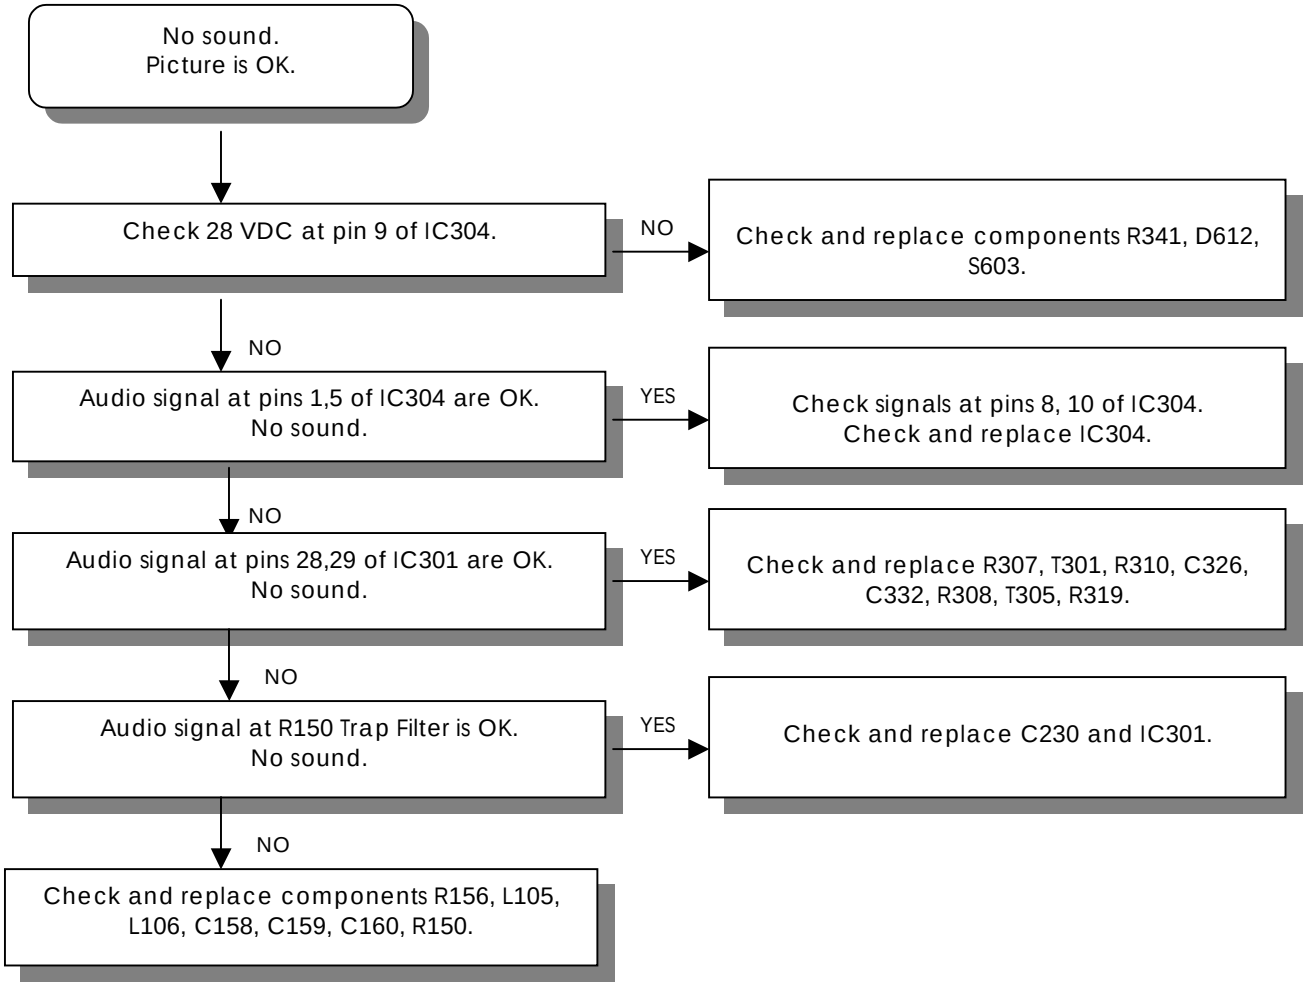
No sound.
Picture is OK.
Check 28 VDC at pin 9 of IC304.
NO
Check and replace components R341, D612, S603.
NO
Audio signal at pins 1,5 of IC304 are OK.
No sound.
YES
Check signals at pins 8, 10 of IC304.
Check and replace IC304.
NO
Audio signal at pins 28,29 of IC301 are OK.
No sound.
YES
Check and replace R307, T301, R310, C326, C332, R308, T305, R319.
NO
Audio signal at R150 Trap Filter is OK.
No sound.
YES
Check and replace C230 and IC301.
NO
Check and replace components R156, L105, L106, C158, C159, C160, R150.

AUDIO DEFECTS (II)

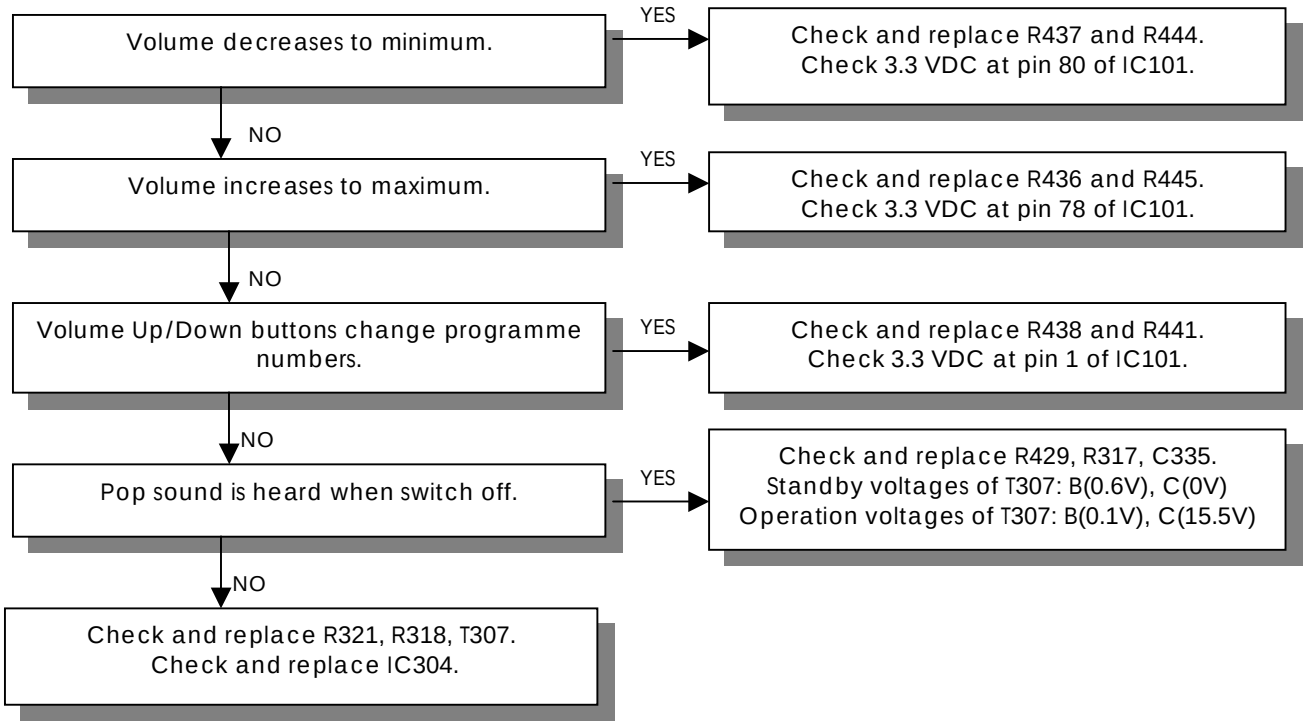
Volume decreases to minimum.
YES
Check and replace R437 and R444.
Check 3.3 VDC at pin 80 of IC101.
NO
Volume increases to maximum.
YES
Check and replace R436 and R445.
Check 3.3 VDC at pin 78 of IC101.
NO
Volume Up/Down buttons change programme numbers.
YES
Check and replace R438 and R441.
Check 3.3 VDC at pin 1 of IC101.
NO
Pop sound is heard when switch off.
YES
Check and replace R429, R317, C335.
Standby voltages of T307: B(0.6V), C(0V)
Operation voltages of T307: B(0.1V), C(15.5V)
NO
Check and replace R321, R318, T307.
Check and replace IC304.

PARTS LIST

PART NO	DESCRIPTION	NOTES	POSITION NUMBERS
291103	CC-CHIP 100PF J 50V /0805 N		C101 C111
293108	CC-CHIP 10NF K 50V /0805 X7		C103 C149
290473	CC-CHIP 47PF J 50V /0805 NP		C104 C107
252112	EC 100UF 16V 11*6 R:5		C105
250113	C-ELA 1UF 25V 11*5 R:5	MONO SOUND	C108
292334	CC-CHIP 3.3NF K 50V /0805 X7R 1.	MONO SOUND	C109
250111	EC 1UF 16V 11*5 R:5		C110
292479	CC-CHIP 4.7NF K 50V /1206 X		C112
293230	CC-CHIP 22NF K 50V /0805 X7		C118 C120
250470	C-ELA 4.7UF 16V 11*5 R:5	MONO SOUND	C123
259223	EC 2.2UF 63V 11*5 R:5		C124 C139 C507
294231	CC-CHIP 220NF K 16V /0805 X		C125
274107	C-PEM 100NF J 100V R:5		C126
290561	CC-CHIP 56PF J 50V NPO 0805		C131 C165
290222	CC-CHIP 22PF J 50V /0805 NP		C136
250111	C-ELA 1UF 16V 11*5 R:5	MONO SOUND	C142 C166
291822	CC-CHIP 820PF J 50V /0805 NP0	MONO SOUND	C144
294476	CC-CHIP 470NF K 16V /0805 X		C145
251107	EC 10UF M 16V 11*5 R:5		C146 C148 C162 C167 C638
294475	CC-CHIP 470NF M 25V /1206 Z		C151
291822	CC-CHIP 820PF J 50V /0805 N		C158 C160
292479	CC-CHIP 4.7NF K 50V /1206 X7R	MONO SOUND	C178
290684	CC-CHIP 68PF J 50V /0805 NP		C186
291225	CC-CHIP 220PF K 50V /0805 X		C202 C203
291473	CC-CHIP 470PF K 50V /0805 X		C209 C366
291474	CC-CHIP 470PF J 50V /1206 N		C214 C210
251478	EC 47UF 16V 11*5 R:5		C217 C221 C224 C302 C314
250470	EC 4.7UF 16V 11*5 R:5		C220 C222 C226 C225
294111	CC-CHIP 100NF K 25V /0805 X		C229 C235
294331	CC-CHIP 330NF K 16V /0805 X		C239 C241
299152	CC-CHIP 1.5PF C 25V/0805		C308 C313
292110	CC-CHIP 1NF K 50V /0805 X7R		C322 C324
250227	EC 2.2UF 16V 11*5 R:5	EXT.SPEAK.	C330A
292105	CC-CHIP 1NF K 50V /1206 X7R		C332 C334
253101	EC 1000UF 35V 25*13 R:5		C338 C340
252229	EC 220UF 16V 11*8 R:5	EXT.SPEAK.	C344 C346
252112	EC 100UF 16V 11*6 R:5		C352 C353 C337 C401 C402
253106	EC 1000UF 25V 20*13 R:5		C354 C355 C620
291477	CC-CHIP 470PF J 50V /0805 N		C405 C406
290334	CC-CHIP 33PF J 50V /0805 NP		C413
272101	C-PEM 1NF K 50V R:5		C503
251478	EC 47UF 16V 11*5 R:5		C504 C639
274230	C-PEM 220NF J 100V R:5		C505 C524 C523
200680	CC 68PF J 500V NPO R:5		C506
292223	CC-CHIP 2.2NF K 50V /0805 X		C508 C509
252476	EC 470UF 25V 11*10 R:5		C512 C527
272154	C-PPM 1.5NF J 1600V R:15	25",28"4/3	C513
272103	C-PPM 1NF J 2KV R:15	28"16/9	C513
271331	C-PPM 330PF J 1500V/1600V R	21"PF, 32"	C513
294109	CC-CHIP 100NF K 50V /0805 X		C515 C516
273104	C-PPM 10NF J 1.5/1.6KV R:22	25",28"4/3	C518
273114	C-PPM 10NF J 1.5/1.6KV R:15	21" PF	C518
273119	C-PPM 11NF J 1.5/1.6KV R:22	33"	C518
273120	C-PPM 12NF J 1.5/1.6KV R:22	28"16/9	C518
273131	C-PPM 13.1NF J 1.5/1.6KV R:	29",32"	C518
273151	C-PPM 15NF J 1KV R:15	16/9 sets	C519
273228	C-PPM 22NF J 1KV R:15	4/3 sets	C519
273331	C-PPM 33NF J 1KV R:15	21" PF	C519
274563	C-PPM 560NF J 250V R:15		C520 C521
274563	C-PPM 560NF J 250V R:15	21",25",32",28"4/3	C521

PARTS LIST

PART NO	DESCRIPTION	NOTES	POSITION NUMBERS
274684	C-PPM 680NF J 250V R:15	33"	C521
274684	C-PPM 680NF J 250V R:15	28"16/9	C521
250100	EC 1UF 160V 11*6.3 R:5		C522
251225	EC 22UF 16V 11*5 R:5		C528
272110	C-PEM 1NF J 100V R:5		C529
274224	C-PEM 220NF K 275V-AC R22. ⚠		C601 C602
274105	C-PEM 100NF J 250V R:10		C603 C701
202105	CC 1NF K 1KV Y5P R:5		C604 C605 C607 C608
274102	C-PEM 100NF J 63V R:5		C606
252150	EC 150UF 400V 40*22 R:10		C613
201471	CC 470PF 2KV		C614 C619
203330	C-PPM 33NF J 630V R:15		C615
202220	CC 2.2NF M 250VAC Y5U R:10 ⚠		C616
253101	EC 1000UF 35V 25*13 R:5		C621
293681	CC-CHIP 68NF K 25V /0805 X7		C624
293474	CC-CHIP 47NF K 50V /0805 X7		C625 C626
252104	EC 100UF 200V 25*16 R:7.5		C629 C627
251228	EC 22UF 200V 11.5*8 R:5		C629
201108	CC 100PF 500V NPO R:5		C631
294108	CC-CHIP 100NF K 50V /1206 X		C632 C326
293332	CC-CHIP 33NF K 50V /0805 X7		C634
293475	CC-CHIP 47NF K 50V /1206 X7		C636
251120	EC 10UF 10V 5*4 R:5		C637 C901
251109	EC 10UF 250V 16*10 R:5		C702 C703
273225	C-PEM 22NF J 63V R:5		C704
202221	C-CE 2.2NF K 2KV Y5P R:7.5		C705
202106	CC 1NF K 50V Y5P R:5	SVHS	C920 C921 C922 C923
273471	C-PEM 47NF K 63V R:5		C940 C941
201472	CC 470PF K 50V SL R:5	EXT.SPEAK.	C962 C963
291101	CC-CHIP 100PF J 50V /1206 N		C981 C982
303195	DIODE 4148 MELF	LL'	D102
303223	DIODE-CHIP BA682 SOD80	LL'	D103 D104
302296	DIODE 1N4148 26MM		D401 D402
302289	DIODE 1N4148 52MM		D401 D402 D505
303195	DIODE 4148 MELF		D503 D504
303109	DIODE ERC06-1500		D507
303244	DIODE RGP30K		D508
302948	DIODE 1N4007		D509 D701
300305	DIODE BA157		D510 D511 D512
303227	DIODE RGP15J		D513
303209	DIODE BAV21		D515 D702 D703 D704
303217	DIODE RGP10J		D601 D615
303308	DIODE RF2007		D602 D603 D604 D605
303215	DIODE RGP10G		D607 D614
303214	DIODE UF4006		D608 D609
303206	DIODE RGP30MS		D611
303228	DIODE RGP30D		D612 D613
303988	LED LTL 4224 RED (SHORT LEG	28"	D901
303942	LED LTL4224 RED	25"	D901
303900	LED ROT	21",29",32",33"	D901
303993	LED LTL4221N D:3 R/D RED		D980
303991	LED IR SIR563SB3F 23/940		D981
056749	SAW FILTER OFW G1985M	PAL BG	F101
056760	SAW FILTER OFW J1956M	PAL I	F101
056709	SAW FILTER OFW K3953M	PAL SECAM DK	F101
056708	SAW FILTER OFW K3958M	SECAM LL'	F101
056767	SAW FILTER OFW K9456M	SECAM LL'	F102
056721	SER.FILTER TPS5.5MWA	PAL SECAM BG DK	F104

PARTS LIST

PART NO	DESCRIPTION	NOTES	POSITION NUMBERS
56709	SAW FILTER OFW K3953M	PIP	F801
056745	SER.FILTER TPS6.0MB	P I	F104
053740	COIL 1UH K LAL03		F105
056640-01	SER.FILTER MKT40.4MA110P-TF	DK	F105
056744	SAW FILTER OFW G9353M	DK	F106
056640-01	SER.FILTER MKT40.4MA110P-TF	LL'	F108
458642	IC-CHIP TDA9563H/N1/3	BG,I (STEREO INTERCARRIER)	IC101
458643	IC-CHIP TDA9565H/N1/3	BG/DK, LL' (STEREO QSS)	IC101
458321	IC-CHIP TDA9555H/N1/1I (32K	MONO QSS	IC101
458964	IC-CHIP TDA9563/H/N1/I/4	PIP (INTERCARIER)	IC101
458965	IC-CHIP TDA9565/H/N1/I/4	PIP (QSS)	IC101
452510	IC 4053B CMOS 16SOIC		IC102
452575-01	IC MSP3400G	NON VIRTUAL DOLBY	IC301
452800	IC MSP3410G PSDIP64 AUDIO P	NON VIRTUAL DOLBY, NICAM	IC301
452595	IC MSP3411G	VIRTUAL DOLBY	IC301
452374	IC L78L05 ACZ TR		IC302
452368	IC TDA7262 PWR AMP SGS THOM	33"	IC304
452482	IC TDA7263		IC304
452784	IC-CHIP M24C08-WMN6 (EEPROM		IC401
452976	IC TDA8359 J		IC501
452487-01	IC MC44608P40		IC601
451517	IC TDB7805CT T0220CASE		IC602
451518	IC KA317TU T0220CASE		IC603 IC604
50S310	INSULATER BUZ90 17*12*.15		IC603
452520	IC TDA6108JF		IC701
451569	IC-CHIP TDA9886T/V3 118(SO24)	PIP	IC801
451570	IC-CHIP SDA9489X SOP28	PIP	IC802
451518	IC KA317TU T0220CASE	PIP	IC803
452521	IR RECEIVER TSOP 1838		IC901
452382	IC-CHIP S3C1840DA9/SMB1		IC980
053711	COIL 10UH K (TAIYO) LAL03		L101 L301 L302 L401 L402
053719	COIL CHIP 1UH		L102 L105 L106
053794	COIL CHIP 330NH /0805		L102
053737	COIL-CHIP 8.2UH K /1206		L104
053735	COIL-CHIP 18UH K /12		L201 L303
051707	COIL 6MH E/W 11.1		L501
051585	COIL H-LIN 70UH	21" PF	L502
051605	COIL H.LINEARITE 39UH	25",29"	L502
053330	COIL H.LINEARITE 45UH	28" 16/9	L502
052692	COIL LINEARITY 30UH (TERMAL	28" 4/3, 32", 33"	L502
051729	BRIDGE COIL 1.5MH	25",28"4/3,33"	L503
051798-01	BRIDGE COIL 1.8MH	28"16/9,32"	L503
051813	BRIDGE COIL 850UH	29"	L503
051737	LINE FILTRE 2*18MH E-TYPE ⚠		L601
053734	COIL 4.7UH LAL03		L603
053739	COIL CHOKE 50UH		L604
053352	COIL- CHOKE 10UH R0814 14.1		L701
053500	BOBIN 10UH K AXIAL LAL04	PIP	L801 L803
055139	CHOKE COIL 50MHZ 600R PH-WB		L962 L963
055127	CORE FERRIT		
055597	FERRITE BEAD 12*8		
133118	R-VAR 10K V(2.5MM) 5*3 ⚠		P601
452408	IC PC123FY2PHOTO COUPLER		PH601
056952	CRYSTAL 18.432MHZ +-30PPM		Q301
056946	CRYSTAL 12MHZ		Q401
056013	CRYSTAL 4 MHZ	PIP	Q801
56161	CRYSTAL 20.25MHZ	PIP	Q802

PARTS LIST

PART NO	DESCRIPTION	NOTES	POSITION NUMBERS
056210	CER.RESONATOR GSB455E		Q980
172335	RC-CHIP 3.3K J 1/10W /0805	MONO SOUND	R103 R106
172683	RC-CHIP 6.8K J 1/10W /0805	MONO SOUND	R107
171471	RC-CHIP 470R J 1/10W /0805	MONO SOUND	R104
174151	RC-CHIP 150K J 1/10W /0805	MONO SOUND	R109
174473	RC-CHIP 470K J 1/10W /0805	MONO SOUND	R110
173154	RC-CHIP 15K J 1/10W /0805		R112
174104	RC-CHIP 100K J 1/10W /0805		R114
101683	CFR 680R J 1/4W /6 52MM		R124
172274	RC-CHIP 2.7K J 1/8W/1206 (T		R126
173392	RC-CHIP 39K %1 1/10W/0805		R127
171393	RC-CHIP 390R J 1/10W /0805		R129
172273	RC-CHIP 2.7K J 1/10W /0805	MONO SOUND	R130
173479	RC-CHIP 47K J 1/10W /0805		R139 R142
171182	RC-CHIP 180R J 1/10W /0805		R147 R163
179001	RC-CHIP 0R /0805 2*1.25	MONO SOUND	R149
171150	RC-CHIP 150R J 1/10W /0805		R154
171102	RC-CHIP 100R J 1/10W /0805		R158 R105
171221	RC-CHIP 220R J 1/10W /0805		R164 R429
173273	CFR-CHIP 27K J 1/10W /0805		R165
171332	RC-CHIP 330R J 1/10W /0805		R170 R425
179001	RC-CHIP 0R /0805 2*1.25		R176 R151
172333	RC-CHIP 3.3K J 1/8W /1206		R201 C336
170750	RC-CHIP 75R J 1/10W /0805		R209 R213
171334	RC-CHIP 330R J 1/8W /1206		R214 R215
172101	RC-CHIP 1K J 1/10W /0805		R216 R217
171104	CFR-CHIP 100R J 1/8W /1206		R220 R221
172335	RC-CIHP 3.3K J 1/10W /0805		R314 R310
173104	RC-CHIP 10K J 1/8W /1206		R317 R633
172123	RC-CHIP 1.2K J 1/8W /1206		R326 R330
171821	RC-CHIP 820R J 1/8W /1206		R328 R332
170473	CFR-CHIP 47R J 1/8W /1206		R329 R162
129150	RWF 1.5R J 1.5W	21",25",28",29",32"	R341
119104	RWF 1R J 1.5W (UFLB) 73MM	33"	R341
179002	RC-CHIP 0R /1206		R342 R228
170332	RC-CHIP 33R J 1/10W /0805		R401 R412
170390	RC-CHIP 39R J 1/8W /1206		R404
170101	RC-CHIP 10R J 1/10W /0805		R421
172474	RC-CHIP 4.7K J 1/8W /1206		R434
172475	RC-CHIP 4.7K J 1/10W /0805		R435 R440
170472	RC-CHIP 47R J 1/10W /0805		R437 R438
171471	RC-CHIP 470R J 1/10W /0805		R439 R218
120234	RMF 22R J 1/2W ⚠		R503
110270	RMF 27R J .75W 52MM ⚠		R503
174180	RC-CHIP 180K J 1/10W /0805		R504
173333	RC-CHIP 33K J 1/10W /0805		R505 R102
173276	RC-CHIP 27K J 1/8W /1206		R506
114110	RM 100K %1 1/4W 26MM		R508
121182	RW 180R J 2W 73MM		R510
109472	CFR 0.47R J 1/2W /9 52MM	21", 25", 28" 4/3, 33"	R513
114151	RM 150K J 1/2W		R514 R517
119476	RMF 4.7R J 1W	21",25",28" 16/9, 29",32",33"	R516 R527
119271	RM 2.7R J 1/2W	25"	R518 R519
119271	RM 2.7R J 1/2W		R518 R519
119181	RMF 1.8R J 1W 52MM	28" 4/3	R518
119220	RM 2.2R J 1/2W	28"16/9	R519
119221	RM 2.2R J 1W	21"	R519
129395	RMF 3.9R J 0.5W 52MM	32"	R519
129395	RMF 3.9R J 0.5W 52MM		R519
119476	RMF 4.7R J 1W ⚠	28"4/3	R519 R527

PARTS LIST

PART NO	DESCRIPTION	NOTES	POSITION NUMBERS
111224	RMO 220R J 1W		R520
119480	RM 0.47R J 1/2W	21", 25"	R521 R606 R607
129471	RF 4.7R J 0.25W 52MM		R522
122114	RWF 1K J 1.5W 73MM		R523
113113	RMF 10K J 1/2W		R524
119152	RMO 1.5R J 2W	21"	R525
119184	RMO 1.8R K 3W R:20		R525
129475	RW 4.7R J 7W (YATIK)	29"	R525
129109	RWF 0.1R J 0.75W 73MM		R526
103116	CFR 10K J 1/4W /6 52MM		R528
119684	RMF 0.68R J 1W ⚠	25"	R529
119122	RMF 1.2R J 1W ⚠	28" 16/9	R529
119155	RMF 1.5R J 1W ⚠	21", 32", 33"	R529
119110	RMF 1R J 1W ⚠	28" 4/3	R529
129109	RWF 0.1R J 0.75W 73MM ⚠	29"	R529
113335	RMO 33K J 1W		R531
154216	NTC 5.1R M (S234R)		R601
154225	PTC 18R/3 PIN ⚠	28"16/9, 29",33"	R602
154234	PTC 9R/2 PIN - 3CYCLE	21"	R602
112393	RM 3.9K %1 1/4W 52MM		R605
119336	RM 0.33R %1 1W		R607
111101	RMO 1K J 1W		R608
113681	RMO 68K J 2W		R609
115470	RM 4.7M J 1/2W 52MM ⚠		R610
102105	CFR 1K J 1/2W /6 52MM		R611
119109	RNF 0.1R J 0.4W (UFLB) 52MM ⚠		R612
100473	CFR 47R J 1/4W /6 52MM		R617 R333
110476	RMO 47R J 3W		R618
113475	RMO 47K J 1W		R621 R629
173101	RC-CHIP 10K J 1/10W /0805		R622 R626
172273	RC-CHIP 2.7K J 1/10W /0805 ⚠		R623
114115	RM 115K %1 1/4W ⚠	21", 28" 16:9, 29", 32"	R625
114152	RM 150K F 1/4W 52MM ⚠	25, 28" 4/3, 33"	R625
112131	RM 1.3K %1 1/4W 26MM		R627
111391	RM 390R %1 1/4W 26MM		R628
172105	RC-CHIP 1K J 1/8W /1206		R630 R236
111241	RM 240R %1 1/4W 26MM		R631 R632
100154	CFR 15R J 1/2W 52MM		R639
103273	CFR 27K J 1/4W /6 52MM ⚠		R645
103475	CFR 47K J 1/4W /6 52MM		R705
102159	CFR 1.5K J 1/2W /9 52MM	PS 29" HHOP U44	R711 R713 R715 R716
102166	CFR 1.5K J 1/4W /6 26MM	EXT.SPEAK.	R903
054261	FUSE 2.5AT (215 SER.) ⚠		S601
054280	FUSE 3.15AT (215) ⚠	PAL I 32"	S601
054263	FUSE T2A ⚠		S602
054264	FUSE T4A ⚠		S603
010760	SLIDE SWITCH 4P2P/4PST	32" 29"	S960
031251	SCART SOCKET 14.1		SK202 SK201
010861	ON/OFF SWITCH BK98 ⚠	25"	SW601
010712-03	POWER SWITCH S40 4/100A-250 ⚠	28",29",32"	SW601
010971	MAIN SWITCH GDE S40 4/100A- ⚠	33"	SW601
010840-01	TACT SW LONG STEN 2LEG	33"	SW901 SW902
010840-01	TACT SW LONG STEN 2LEG	28"	SW901 SW902
010845	TACT SW WITH GREEN LED	32" 29"	SW901 SW902
010844	TACT SWITCH 2 LEG (MTSB)	25"	SW901 SW902
401141	TRN-CHIP BC848B SOT23	MONO SOUND	T101 T102
401141	TRN-CHIP BC848B SOT23		T103 T104 T105 T106
401142	TRN-CHIP BC858B SOT23		T301 T302 T303 T305 T308

PARTS LIST

PART NO	DESCRIPTION	NOTES	POSITION NUMBERS
400989	TRN BC558B		T306 T309
401141	TRN-CHIP BC848B SOT23		T307 T403
401279	TRN 2SK2381		T501
401218	TRN BC618		T503
401215	TRN BU508DF		T504
401216-02	TRN 2SK2545		T601
401047	TRN BC337-25		
401142	TRN-CHIP BC858B SOT23		T980
401141	TRN-CHIP BC848B SOT23		T603 T604
410026	THRYSTOR MCR22-8		TH601
051709	DRIVER TRANSFORMER 11.1		TR501
057138-EL1	FBT 21" 14:2 ⚠	21" PF	TR502
057834-TR2	FBT 28" 16:9 14.1 ⚠	28" 16:9	TR502
058934-TR1	FBT 29" 14.1 (C-TYPE) ⚠	29"	TR502
057534-EL2	FBT 2528 14.1 ⚠	25", 28"4/3	TR502
057334-EL1	FBT 33' 14.1 ⚠	33"	TR502
059138-EL1	SMPS 21" 14.2 P.FLAT ⚠	21"	TR601
059834-TR1	SMPS 28" 16:9/SLOT TR/..... ⚠	32"	TR601
059934-TR1	SMPS 29" 14.1 ⚠	29"	TR601
059534-TR1	SMPS 2528 14.1 ⚠	25", 28"	TR601
059834-TR1	SMPS 28" 16:9 14.1 ⚠	28" 16:9	TR601
059334-TR1	SMPS 33" 14.1 ⚠	33"	TR601
051805	COIL PFC 56MH DTH30563H ELI		TR602
7RZ136-PH3	TUNER PH ASIMETRIK UV1316/A		TU101
S99136-PH1	TUNER PH SPL ASIMETRIK UV1316 T	PIP	TU101
7RZ136-PH4	TUNER PH ASIMET. UV1316/ALG-3 SV22	PIP	TU201
031866	CONN.HOUSING X2006 GREY		X102
031035	PIN HEADETR 2.5MM 7.PC.MOLE	LL'	X104
031854	CONN.HOUSING X2003 GREY		X301 X405 X940
031858	CONN.HOUSING X2004 GREY		X302 X402
031780	CONN.HOUSING 2'LI GREY		X303 X501
031872	CONN.HOUSING X2007 BLACK		X403
031856	CONN.HOUSING X2003 BLACK		X404
031794	CONN.MALE HOR. 4.PIN PLUG		X502
031821	CON.HOUSING X2.5TMK 2204 GR		X503
031675	CON.HOUSING 2P MALE		X601 X602 X604 X605
031727	CON.MALE. 2.5TMK 2009S	PIP	X662
031882	CON.MALE X2.5TMK 2010G	PIP	X663
031530-01	INCHANG/CRT SOCKET ISHM05S- ⚠	Non Pure Flat	X703
031530-02	INCHANG/CRT SOCKET ISHM23S- ⚠	21" Pure Flat	X703
031541	CRT SOCKET 29" DOUBLE FOCUS ⚠	Pure Flat	X703
031413	CONN.FEMALE 9 PIN		X801
31323	CON.MKF19400-6-0-1010		X802
031165	KONN. CINCH ..... YEL	SVHS	X921
031164	KONN. CINCH ..... RED	SVHS	X922
031163	KONN. CINCH ..... WHITE	SVHS	X923
031784	KONN.S-VHS B10B MONAKOR	SVHS	X924
031423	HEADPHONE JACK YKB21-5103		X941
031357	CON.HOUSING X2.5TMK 2904 G	EXT. SPEA.	X962
031021	PIN HEADETR 2.54MM 3.PC.MOL	29" 32"	X964
031020	PIN HEADETR 2.54MM 4.PC.MOL	29" 32"	X965
303826	DIODE Z. BZX55C 15V		ZD501
302782	DOIDE Z. MTZJ18B	21" Pure Flat	ZD501
303771	DIODE Z. UZT33V		ZD502
451885-01	IC TL431CLP (ON SEMICONDUCT		ZD602
303799	D- ZENER MTZJ12B		ZD603

PARTS LIST

PART NO	DESCRIPTION	NOTES	POSITION NUMBERS
300193	DIODE Z. BZX55C9V1-GPS(VISH		ZD606
S99170	PIP MODULE KPL.14.2	PIP	
056321-PH7	CPT PH A51ERF135*70 P.FLAT ⚠	21" Pure Flat	
056325-VC4	CPT VC A59EHJ13X38 ⚠	25"	
056428-SB1	CPT SEB W66QDE893X286 (P.FLAT) ⚠	28"16/9 Pure Flat	
056428-PS1	CPT PS W66EHK51X36 ⚠	28"16/9 Super Flat	
056328-VC6	CPT VC A66EHJ13X62 ⚠	28"4/3	
056329-SB1	CPT SEB A68QCP891X404 ⚠	29" Pure Flat	
056329-VC2	CPT VC A68EGD049X30 (S.FLAT ⚠	29" Super Flat	
056432-PS2	CPT PS W76EKW10X21 P.FLAT ⚠	32" Pure Flat	
056432-VC2	CPT VC W76EGV023X015 S FLAT ⚠	32" Super Flat	
056333-VC3	CPT VC A80AEJ15X04 ⚠	33"	
525167-AS	DEGAUSSING COIL ASSY 25" BA ⚠	25"	
628167-AS	DEGAUSSING COIL ASSY 28" BA ⚠	28"4/3	
528166-AS	DEGAUSSING COIL ASSY ⚠	28"16/9 Pure Flat	
621167-AS	DEGAUSSING COIL ASSY 21" BA ⚠	21" Pure Flat	
528169-AS	DEGAUSSING COIL ASSY ⚠	28"16/9 Super Flat	
629167-AS	DEGAUSSING COIL 29" ⚠	29"	
532168-AS	DEGAUSSING COIL ASSY ⚠	32" Pure Flat	
532169-AS	DEGAUSSING COIL ASSY ⚠	32" Super Flat	
533167-AS	DEGAUSSING COIL 33" ⚠	33"	
7P3187	RC A TYPE PRINTED SIL		
6VM187	RC A TYPE SILVER 14.1		
7UK187	RC A TYPE GREY 14.1		
7TK187	RC B TYPE FUME 14.1		
7PE187	RC B TYPE M.GREY 14.1		
5T1187	RC B TYPE SILV.14.1		
7UB109-AS	SPE.SUB 4R/20W(NOM)21T04/25	29"	
7UB107-AS	SPEAKER 8R/15W(MAX)21T04/25	29"	
6X1107-AS	SPK.8R/15W(MAX) 32"T20/T21	EXT.SPEAK.	
7UB108-AS	TWEETER 10R/10W(N)21T04/25T	29"	
7VA108-AS	TWEETER DYNAMIC D=52 8R/15W	33"	

Please note that Product Part List Files should be investigated for the mechanical parts like cabinets, etc.

14.2 CTV CHASSIS

S99.820-01

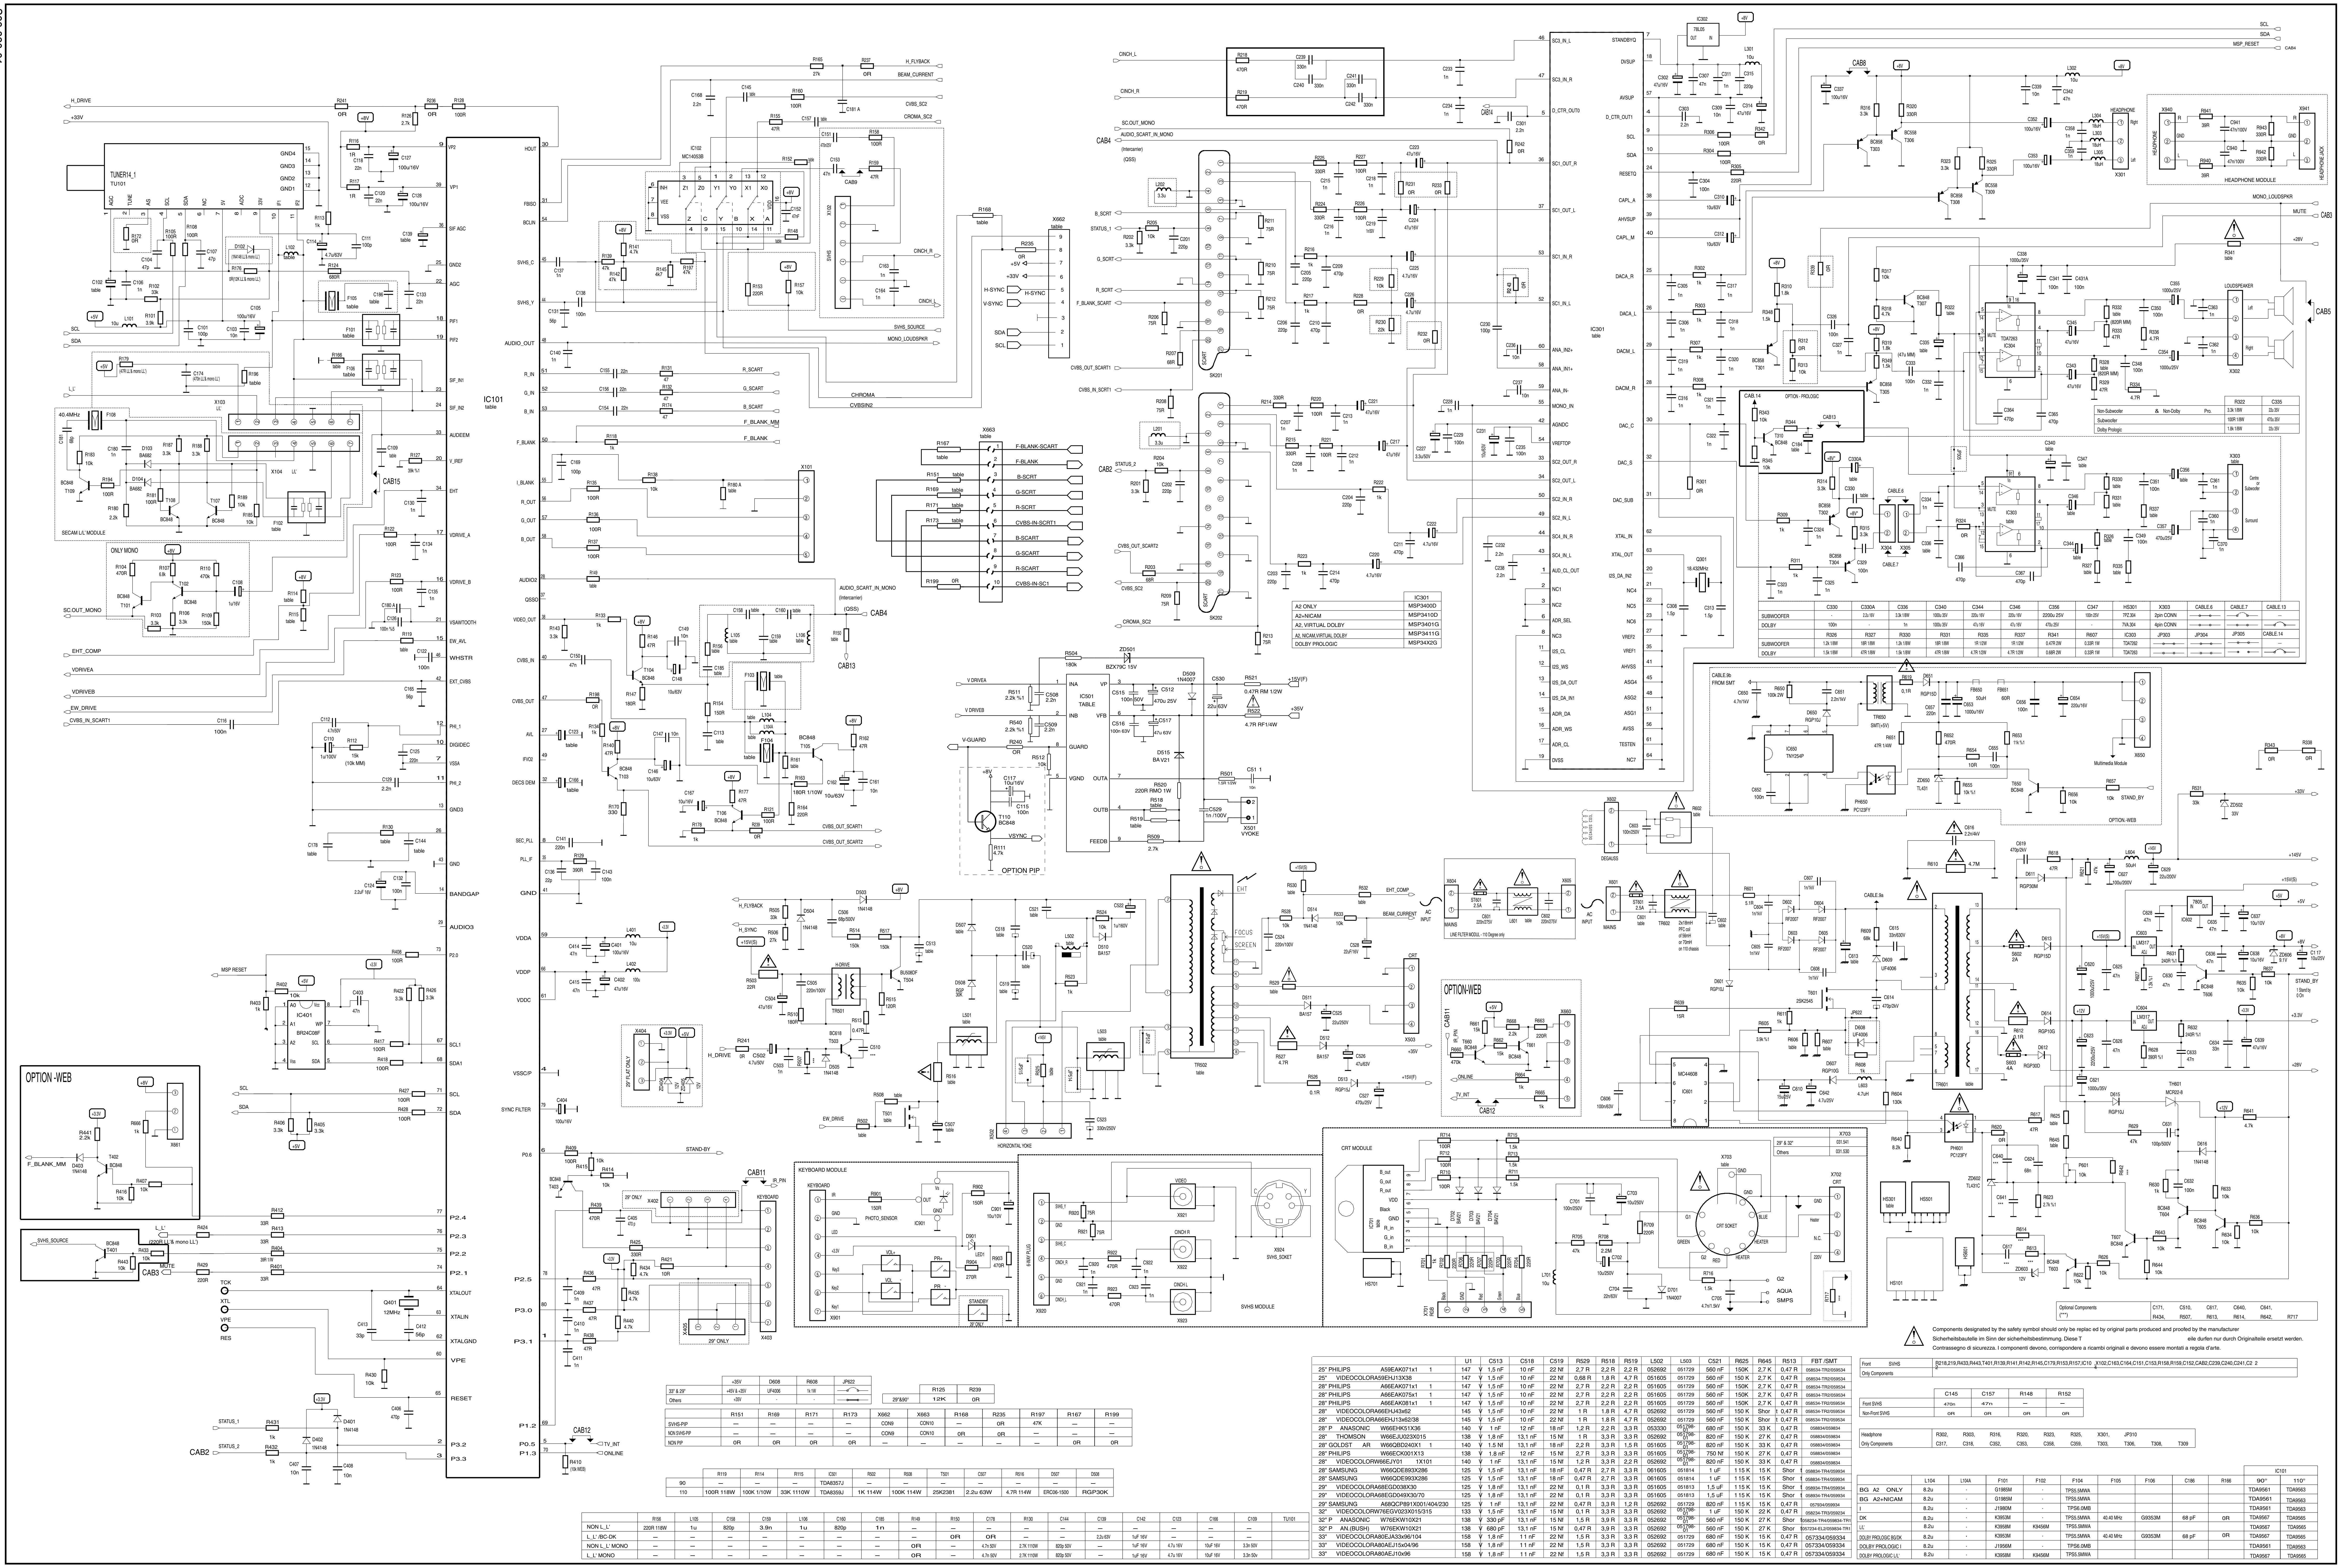

	IC301
A2 ONLY	MSP3400D
A2+NICAM	MSP3410D
A2, VIRTUAL DOLBY	MSP3401G
A2, NICAM,VIRTUAL DOLBY	MSP3411G
DOLBY PROLOGIC	MSP34X2G

		R322	C335
Non-Subwoofer & Non-Dolby	Pro.	3.3k 1/8W	22u 35V
Subwoofer		100R 1/8W	470u 35V
Dolby Prologic		1.8k 1/8W	22u 35V

	C330	C330A	C336	C340	C344	C346	C356	C347	HS301	X303	CABLE.6	CABLE.7	CABLE.13
SUBWOOFER	-	2.2u 16V	3.3k 1/8W	1000u 35V	220u 16V	220u 16V	2200u 25V	100n 25V	7PZ.304	2pin CONN			—
DOLBY	100n	-	1n	1000u 35V	47u 16V	47u 16V	470u 25V	-	7VA.304	4pin CONN			
	R326	R327	R330	R331	R335	R337	R341	R607	IC303	JP303	JP304	JP305	CABLE.14
SUBWOOFER	1.2k 1/8W	18R 1/8W	1.2k 1/8W	18R 1/8W	1R 1/2W	1R 1/2W	0.47R 2W	0.33R 1W	TDA7262				—
DOLBY	1.5k 1/8W	47R 1/8W	1.5k 1/8W	47R 1/8W	4.7R 1/2W	4.7R 1/2W	0.68R 2W	0.33R 1W	TDA7263				

	+35V	D608	R608	JP622
33" & 29"	+45V & +35V	UF4006	1k 1W	
Others	+35V	-	-	

	R125	R239
29"&90°	12K	0R

	R151	R169	R171	R173	X662	X663	R168	R235	R197	R167	R199
SVHS-PIP	—	—	—	—	CON9	CON10	—	0R	47K	—	—
NON SVHS-PIP	—	—	—	—	CON9	CON10	0R	0R	—	—	—
NON PIP	0R	0R	0R	0R	—	—	—	—	—	0R	0R

	R119	R114	R115	IC501	R502	R508	T501	C507	R516	D507	D508
90	—	—	—	TDA8357J	—	—	—	—	—	—	—
110	100R 118W	100K 1/10W	33K 1110W	TDA8359J	1K 114W	100K 114W	25K2381	2.2u 63W	4.7R 114W	ERC06-1500	RGP30K

	R156	L105	C158	C159	L106	C160	C185	R149	R150	C178	R130	C144	C139	C142	C123	C166	C109	TU101
NON L_L'	220R 118W	1u	820p	3.9n	1u	820p	1n	—	—	—	—	—	—	—	—	—	—	
L_L' /BC-DK	—	—	—	—	—	—	—	—	0R	0R	—	—	2.2u 63V	1uF 16V	—	—	—	
NON L_L' MONO	—	—	—	—	—	—	—	0R	—	4.7n 50V	2.7K 1110W	820p 50V	—	1uF 16V	4.7u 16V	10uF 16V	3.3n 50V	
L_L' MONO	—	—	—	—	—	—	—	0R	—	4.7n 50V	2.7K 1110W	820p 50V	—	1uF 16V	4.7u 16V	10uF 16V	3.3n 50V	

	X703
29" & 32"	031.541
Others	031.530

Optional Components (***)	C171,	C510,	C617,	C640,	C641,	
	R434,	R507,	R613,	R614,	R642,	R717

Components designated by the safety symbol should only be replac ed by original parts produced and proofed by the manufacturer

Sicherheitsbauteile im Sinn der sicherheitsbestimmung. Diese Teile durfen nur durch Originalteile ersetzt werden.

Contrassegno di sicurezza. I componenti devono, corrispondere a ricambi originali e devono essere montati a regola d'arte.

	U1	C513	C518	C519	R529	R518	R519	L502	L503	C521	R625	R645	R513	FBT /SMT
25" PHILIPS A59EAK071x1 1	147 V	1,5 nF	10 nF	22 Nf	2,7 R	2,2 R	2,2 R	052692	051729	560 nF	150K	2,7 K	0,47 R	058534-TR2/059534
25" VIDEOCOLORA59EHJ13X38	147 V	1,5 nF	10 nF	22 Nf	0,68 R	1,8 R	4,7 R	051605	051729	560 nF	150 K	2,7 K	0,47 R	058534-TR2/059534
28" PHILIPS A66EAK071x1 1	147 V	1,5 nF	10 nF	22 Nf	2,7 R	2,2 R	2,2 R	051605	051729	560 nF	150K	2,7 K	0,47 R	058534-TR2/059534
28" PHILIPS A66EAK075x1 1	147 V	1,5 nF	10 nF	22 Nf	2,7 R	2,2 R	2,2 R	052692	051729	560 nF	150K	2,7 K	0,47 R	058534-TR2/059534
28" PHILIPS A66EAK081x1 1	147 V	1,5 nF	10 nF	22 Nf	2,7 R	2,2 R	2,2 R	051605	051729	560 nF	150K	2,7 K	0,47 R	058534-TR2/059534
28" VIDEOCOLORA66EHJ43x62	145 V	1,5 nF	10 nF	22 Nf	1 R	1,8 R	4,7 R	052692	051729	560 nF	150 K	Short	0,47 R	058534-TR2/059534
28" VIDEOCOLORA66EHJ13x62/38	145 V	1,5 nF	10 nF	22 Nf	1 R	1,8 R	4,7 R	052692	051729	560 nF	150 K	Short	0,47 R	058534-TR2/059534
28" P ANASONIC W66EHK51X36	140 V	1 nF	12 nF	18 nF	1,2 R	2,2 R	3,3 R	053330	051798-01	680 nF	150 K	33 K	0,47 R	058834/059834
28" THOMSON W66EJU023X015	138 V	1,8 nF	13,1 nF	15 Nf	1 R	3,3 R	3,3 R	052692	051798-01	820 nF	150 K	27 K	0,47 R	058834/059834
28" GOLDST AR W66QBD240X1 1	140 V	1.5 Nf	13,1 nF	18 nF	2,2 R	3,3 R	1,5 R	051605	051798-01	820 nF	150 K	33 K	0,47 R	058834/059834
28" PHILIPS W66ECK001X13	138 V	1.8 nF	12 nF	15 Nf	2,7 R	3,3 R	3,3 R	051605	051798-01	750 Nf	150 K	27 K	0,47 R	058834/059834
28" VIDEOCOLORW66EJY01 1X101	140 V	1 nF	13,1 nF	15 Nf	1,2 R	3,3 R	2,2 R	052692	051798-01	820 nF	150 K	33 K	0,47 R	058834/059834
28" SAMSUNG W66QDE893X286	125 V	1,5 nF	13,1 nF	18 nF	0,47 R	2,7 R	3,3 R	061605	051814	1 uF	115 K	15 K	Short	058834-TR4/059934
28" SAMSUNG W66QDE993X286	125 V	1,5 nF	13,1 nF	18 nF	0,47 R	2,7 R	3,3 R	061605	051814	1 uF	115 K	15 K	Short	058834-TR4/059934
29" VIDEOCOLORA68EGD038X30	125 V	1,8 nF	13,1 nF	22 Nf	0,1 R	3,3 R	3,3 R	051605	051813	1,5 uF	115 K	15 K	Short	058934-TR4/059934
29" VIDEOCOLORA68EGD049X30/70	125 V	1,8 nF	13,1 nF	22 Nf	0,1 R	3,3 R	3,3 R	051605	051813	1,5 uF	115 K	15 K	Short	058934-TR4/059934
29" SAMSUNG A68QCP891X001/404/230	125 V	1 nF	13,1 nF	22 Nf	0,47 R	3,3 R	1,2 R	052692	051729	820 nF	115 K	15 K	0,47 R	057934/059934
32" VIDEOCOLORW76EGV023X015/315	133 V	1,5 nF	13,1 nF	15 Nf	0,1 R	3,3 R	3,3 R	052692	051798-01	1 uF	150 K	22 K	0,47 R	058234-TR3/059234
32" P ANASONIC W76EKW10X21	138 V	330 pF	13,1 nF	15 Nf	1,5 R	3,9 R	3,3 R	052692	051798-01	560 nF	150 K	27 K	Short	058234-TR4/059834-TR1
32" P AN.(BUSH) W76EKW10X21	138 V	680 pF	13,1 nF	15 Nf	0,47 R	3,9 R	3,3 R	052692	051798-01	560 nF	150 K	27 K	Short	057234-EL2/059834-TR1
33" VIDEOCOLORA80EJA33x96/104	158 V	1,8 nF	11 nF	22 Nf	1,5 R	3,3 R	3,3 R	052692	051729	680 nF	150 K	15 K	0,47 R	057334/059334
33" VIDEOCOLORA80AEJ15x04/96	158 V	1,8 nF	11 nF	22 Nf	1,5 R	3,3 R	3,3 R	052692	051729	680 nF	150 K	15 K	0,47 R	057334/059334
33" VIDEOCOLORA80AEJ10x96	158 V	1,8 nF	11 nF	22 Nf	1,5 R	3,3 R	3,3 R	052692	051729	680 nF	150 K	15 K	0,47 R	057334/059334

Front SVHS Only Components	R218,219,R433,R443,T401,R139,R141,R142,R145,C179,R153,R157,IC102 X102,C163,C164,C151,C153,R158,R159,C152,CAB2,C239,C240,C241,C242

	C145	C157	R148	R152
Front SVHS	470n	47n	—	—
Non-Front SVHS	0R	0R	0R	0R

Headphone	R302,	R303,	R316,	R320,	R323,	R325,	X301,	JP310	
Only Components	C317,	C318,	C352,	C353,	C358,	C359,	T303,	T306,	T308, T309

	L104	L104A	F101	F102	F104	F105	F106	C186	R166	IC101 90°	IC101 110°
BG A2 ONLY	8.2u	·	G1985M	·	TPS5.5MWA					TDA9561	TDA9563
BG A2+NICAM	8.2u	·	G1985M	·	TPS5.5MWA					TDA9561	TDA9563
I	8.2u	·	J1980M	·	TPS6.0MB					TDA9561	TDA9563
DK	8.2u	·	K3953M	·	TPS5.5MWA	40.40 MHz	G9353M	68 pF	0R	TDA9567	TDA9565
L/L'	8.2u	·	K3958M	K9456M	TPS5.5MWA					TDA9567	TDA9565
DOLBY PROLOGIC BG/DK	8.2u	·	K3953M	·	TPS5.5MWA	40.40 MHz	G9353M	68 pF	0R	TDA9567	TDA9565
DOLBY PROLOGIC I	8.2u	·	J1956M	·	TPS6.0MB					TDA9561	TDA9563
DOLBY PROLOGIC L/L'	8.2u	·	K3958M	K9456M	TPS5.5MWA					TDA9567	TDA9565

PIP MODUL (PICTURE IN PICTURE OPTIONAL)

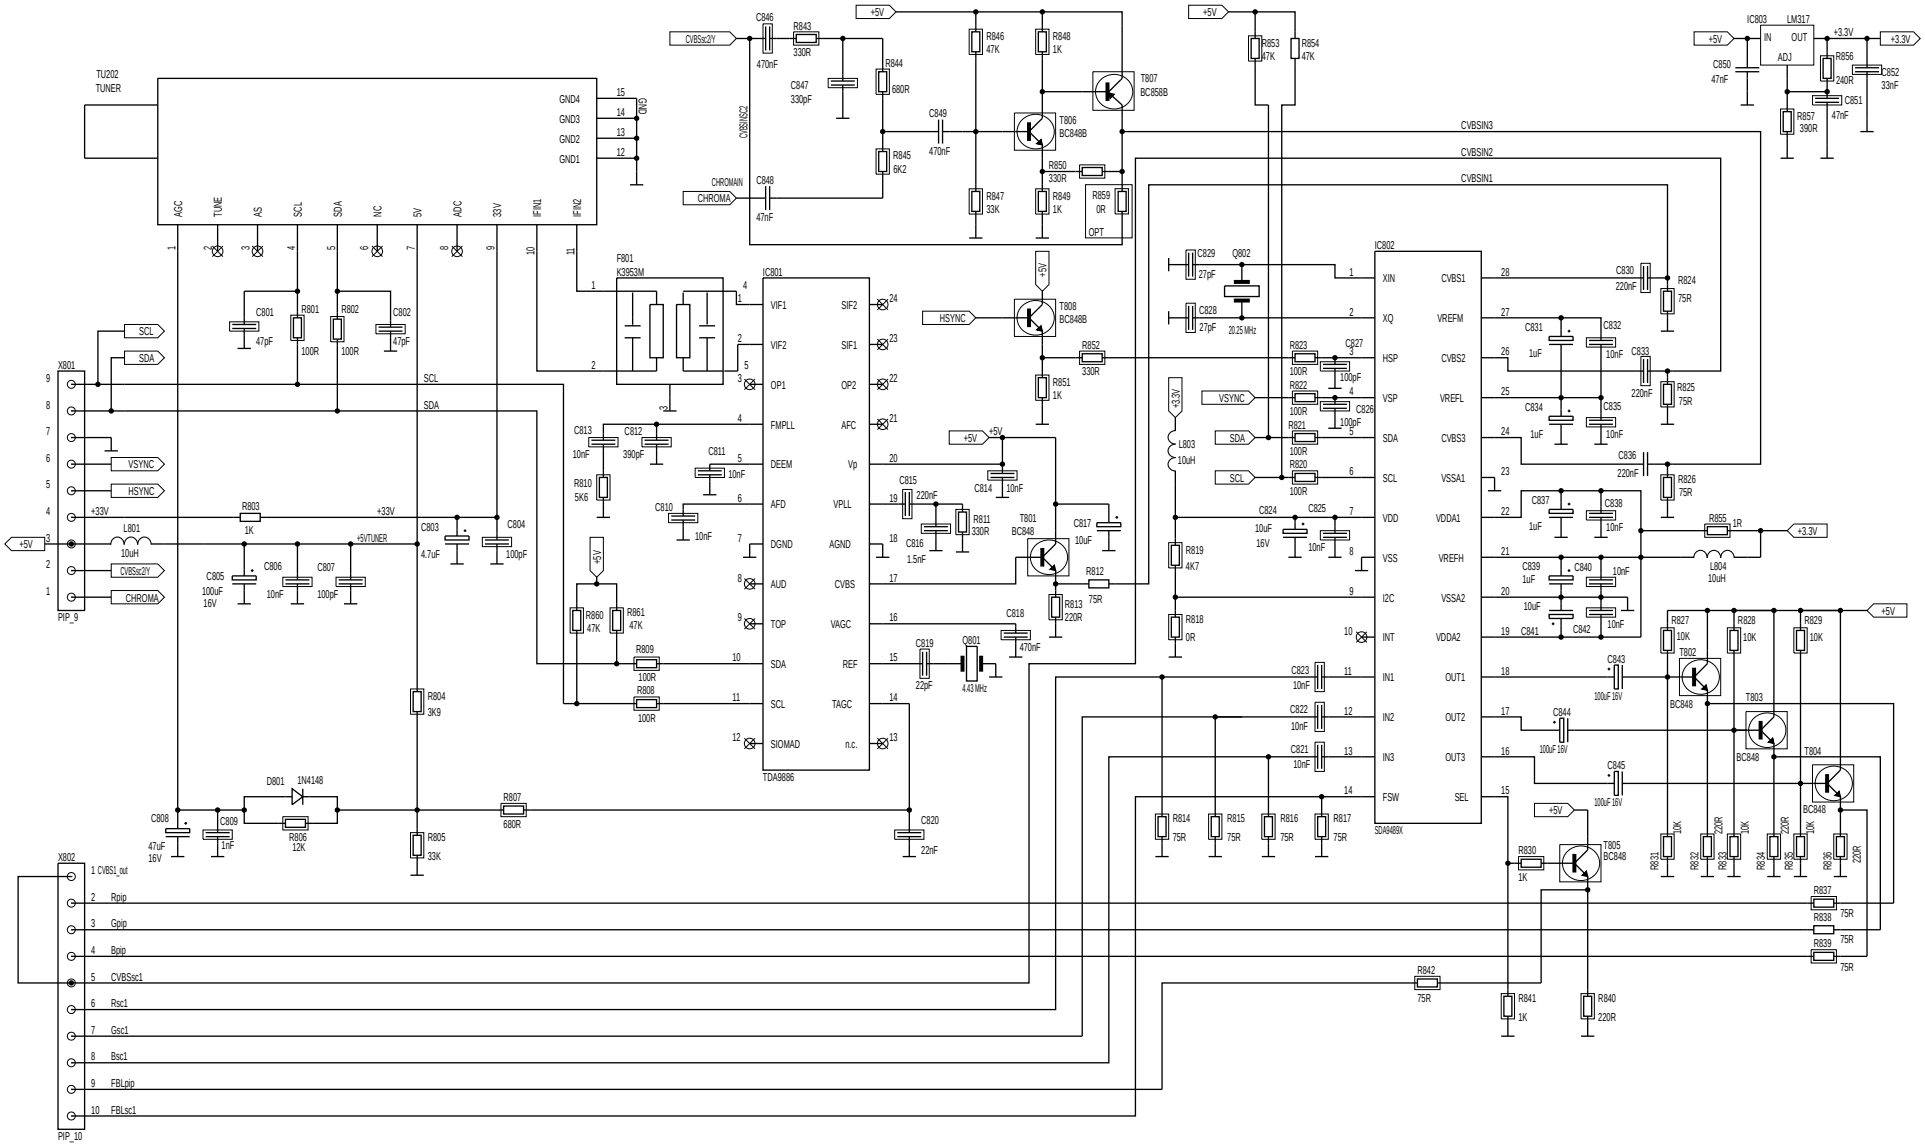

14.2 MONO

CG9820

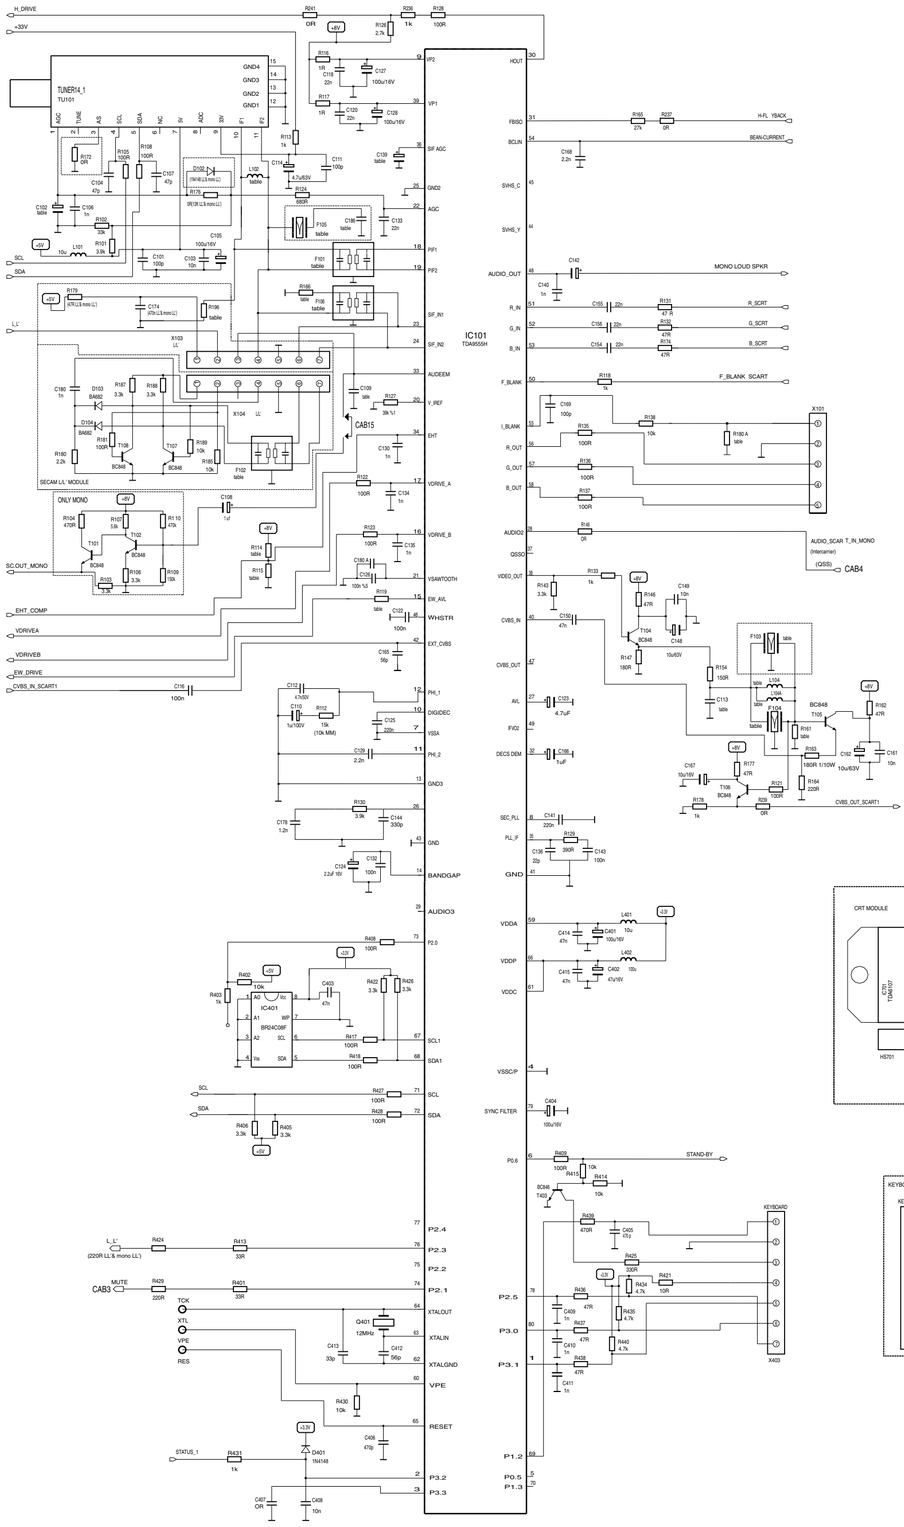

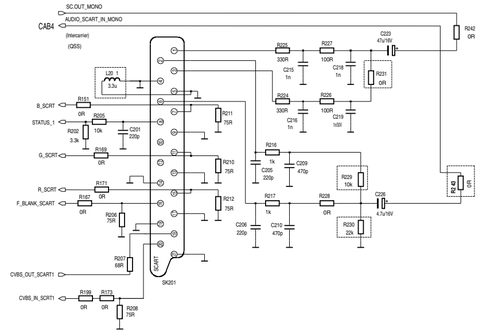

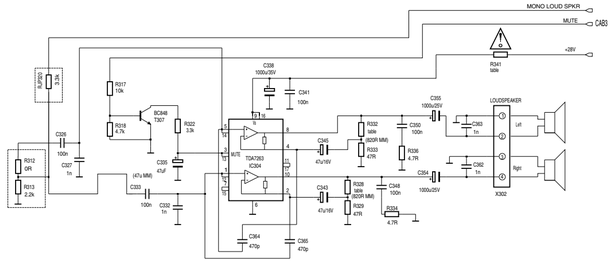

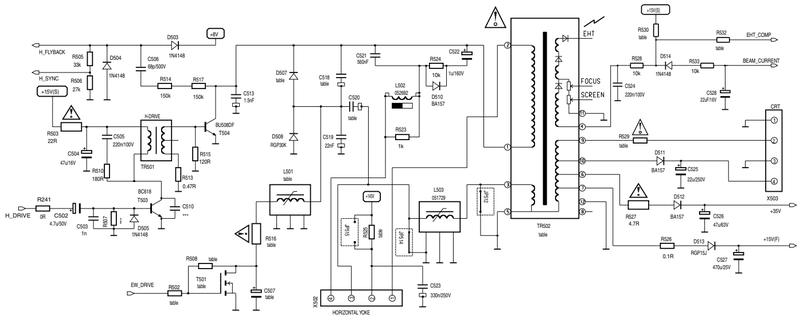

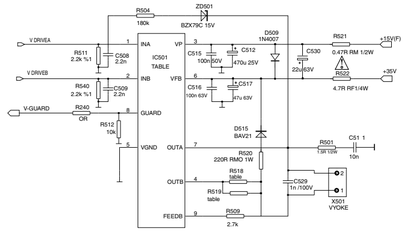

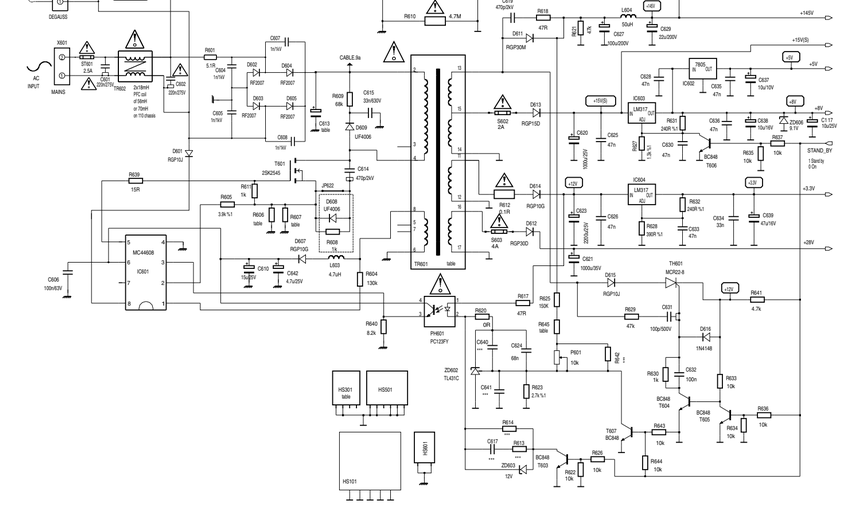

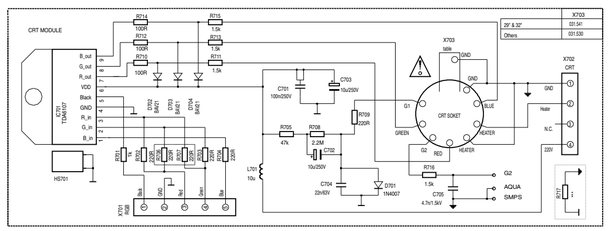

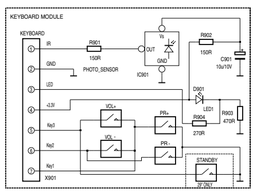



TR601	TR502	TR602
059.514-TRX	057.534-TRX	051.805(2x5mH)
059.514-ELX	057.534-ELX	
	058.534-TRX	
	058.534-ELX	

	U1	R529	R518	R519	L502	R645
25" PHILIPS	A59EAK071x1	1147 V	2,7 R	2,2 R	2,2 R	052692	2,7 K
25" VIDEOCOLOR	A59EHJ13X38	147 V	0,68 R	1,8 R	4,7 R	051605	2,7 K
28" PHILIPS	A66EAK071x1	1147 V	2,7 R	2,2 R	2,2 R	051605	2,7 K
28" PHILIPS	A66EAK075x1	1147 V	2,7 R	2,2 R	2,2 R	051605	2,7 K
28" PHILIPS	A66EAK071x1	1147 V	2,7 R	2,2 R	2,2 R	051605	2,7 K
28" PHILIPS	A66EAK081x1	1147 V	2,7 R	2,2 R	2,2 R	051605	2,7 K
28" VIDEOCOLOR	A66EHJ43x62	145 V	1 R	1.8 R	4,7 R	052692	Short
28" VIDEOCOLOR	A66EHJ13x62	145 V	1 R	1.8 R	4,7 R	052692	Short
28" VIDEOCOLOR	A66EHJ13x38	145 V	1 R	1.8 R	4,7 R	052692	Short

	R119	R154	R155	IC501	R602	R68	T501	C027	R016	D507	D508
90	—	—	—	TDA8357J	—	—	—	—	—	—	—
110	100R 118W	100K 1/10W	33K 1/10W	TDA8359J	1K 114W	100K 114W	2SK2381	2.2u 63W	4.7R 114W	ERC06-1500	RGP30K

	+30V	D608	R608	JP622
32" & 29"	+B'4 & +25V	UF4006	to 19	
Others	+30V	-	-	

	R125	R239
29"&90"	1.2K	0R

	F101	F105	C186	F106	R166	F104	L104	D102	R176	C102	C139	JP139	R424	R179	C174	JP109	JP1 10
PAL BG	G1968M					TPSS.5MB	BOBIN CHIP 8.2UH		RC-CHIP 0805 0R	C-ELA 47UF 16V							
PS BG	G1968M					TPSS.5MB	BOBIN CHIP 8.2UH		RC-CHIP 0805 0R	C-ELA 47UF 16V							
PS BG-DK	G1968M	40.40MHZ	TRAP	68PF	0R	TPSS.5MB	BOBIN CHIP 8.2UH		RC-CHIP 0805 0R	C-ELA 47UF 16V	C-ELA 2.2UF					VAR	VAR
PS BG-LL'	K3958M					TPSS.5MW	BOBIN CHIP 8.2UH	MELF 1N4148	RC-CHIP 0805 12K	C-ELA 150UF	C-ELA 2.2UF	VAR	RC 1/4W 220R	RC-CHIP 47R 0805	CC-CHIP 470N 0805	VAR	VAR
PAL I	J1956M	40.98HZ	TRAP	68PF		TPS6.0MB	BOBIN CHIP 8.2UH		RC-CHIP 0805 0R	C-ELA 47UF 16V							

Optional Components (**)	C171, R434,	C510, R507,	C617, R613,	C640, R614,	C641, R642,	R717

Components designated by the safety symbol should only be replac ed by original parts produced and proofed by the manufacturer
Sicherheitsbauteile im Sinn der sicherheitsbestimmung, Diese T eile durfen nur durch Originalteile ersetzt werden.
Contrassegno di sicurezza. I componenti devono, corrispondere a ricambi originali e devono essere montati a regola d'arte.

CHASSIS

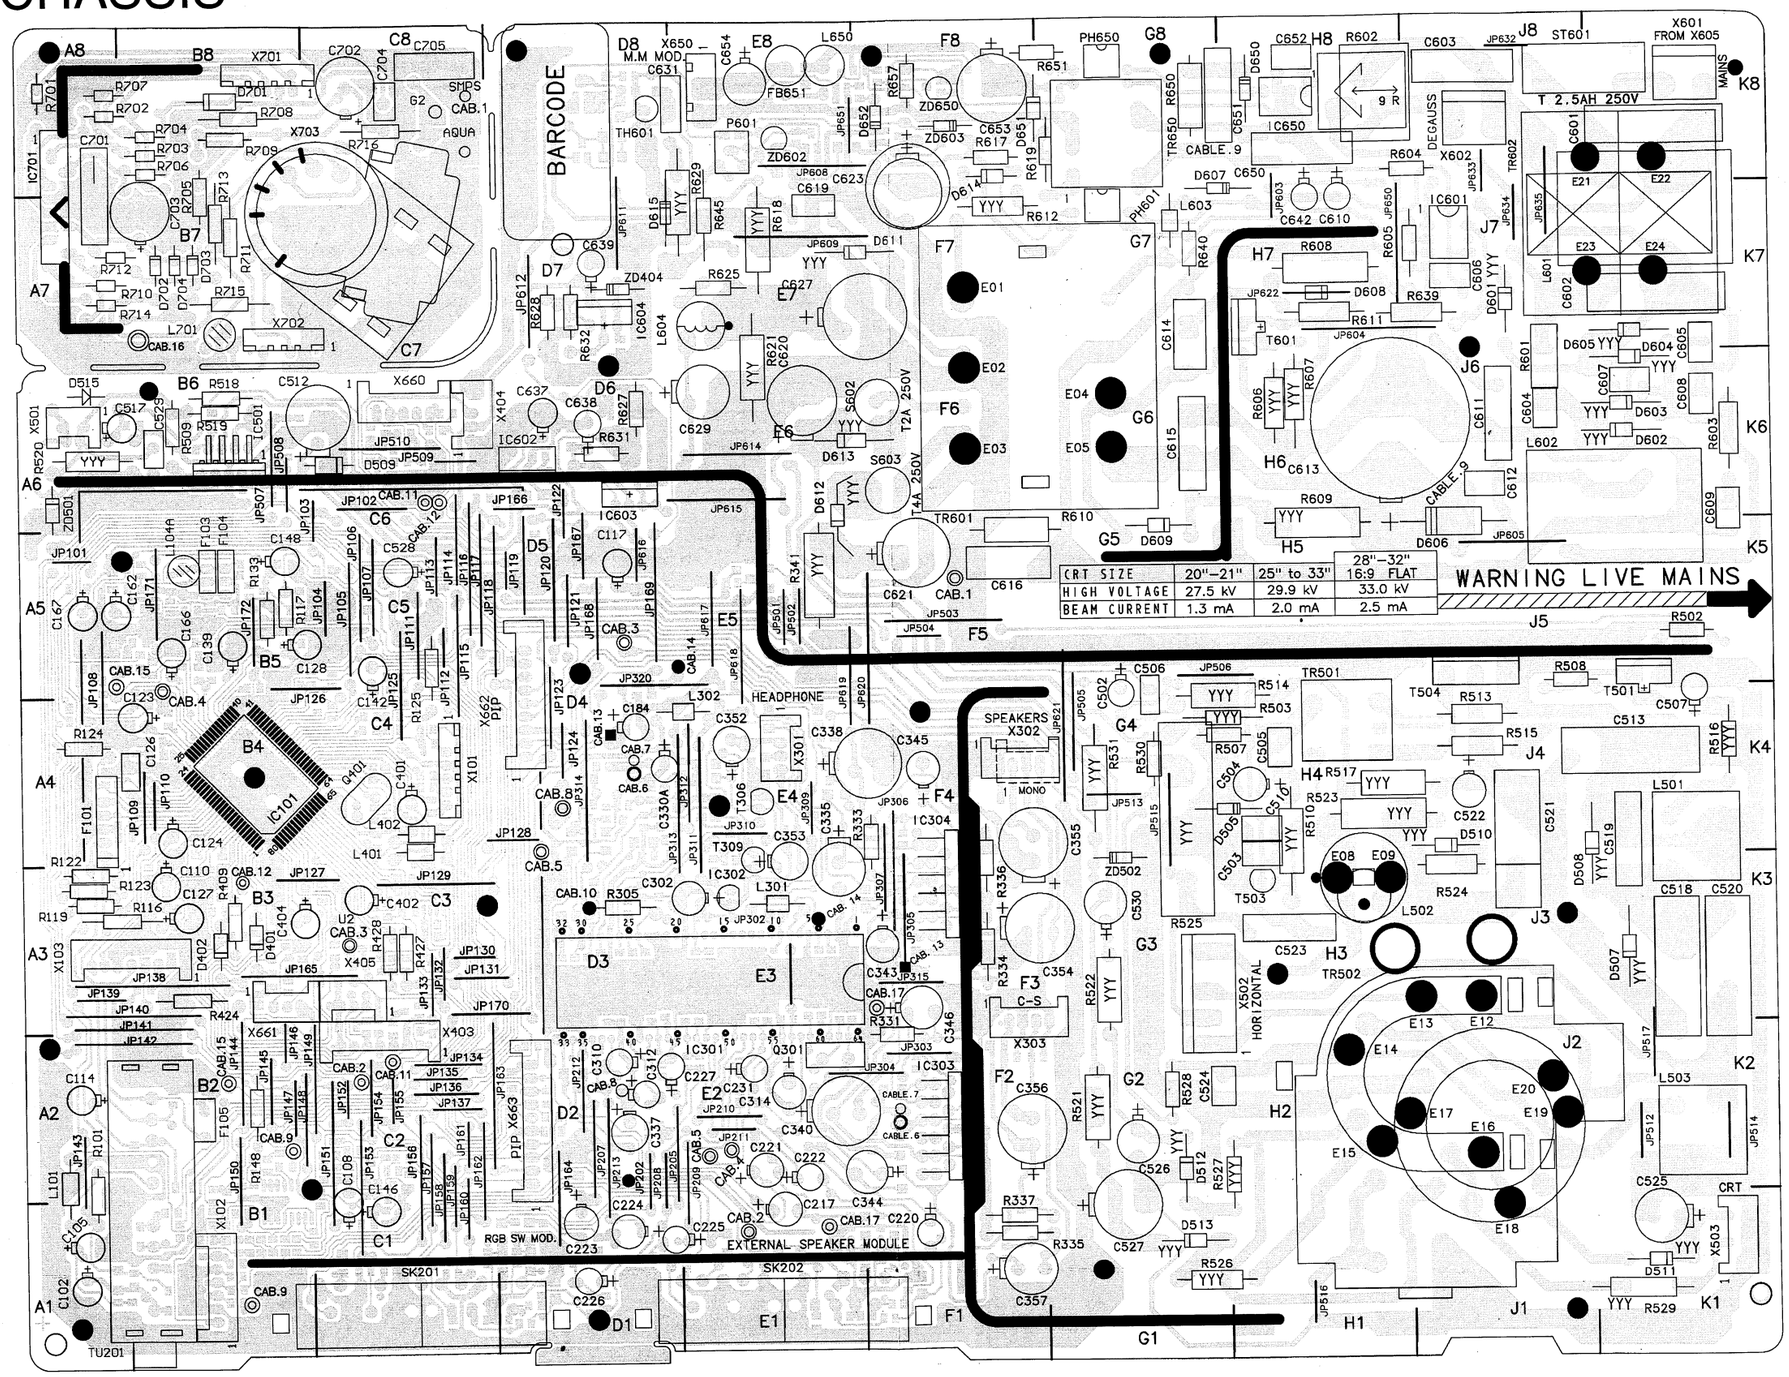
BARCODE
WARNING LIVE MAINS
T 2.5AH 250V
MAINS
DEGAUSS
CRT
HORIZONTAL
SPEAKERS X302
EXTERNAL SPEAKER MODULE
RGB SW MOD.
HEADPHONE
CRT SIZE | 20"–21" | 25" to 33" | 28"–32" 16:9 FLAT
HIGH VOLTAGE | 27.5 kV | 29.9 kV | 33.0 kV
BEAM CURRENT | 1.3 mA | 2.0 mA | 2.5 mA

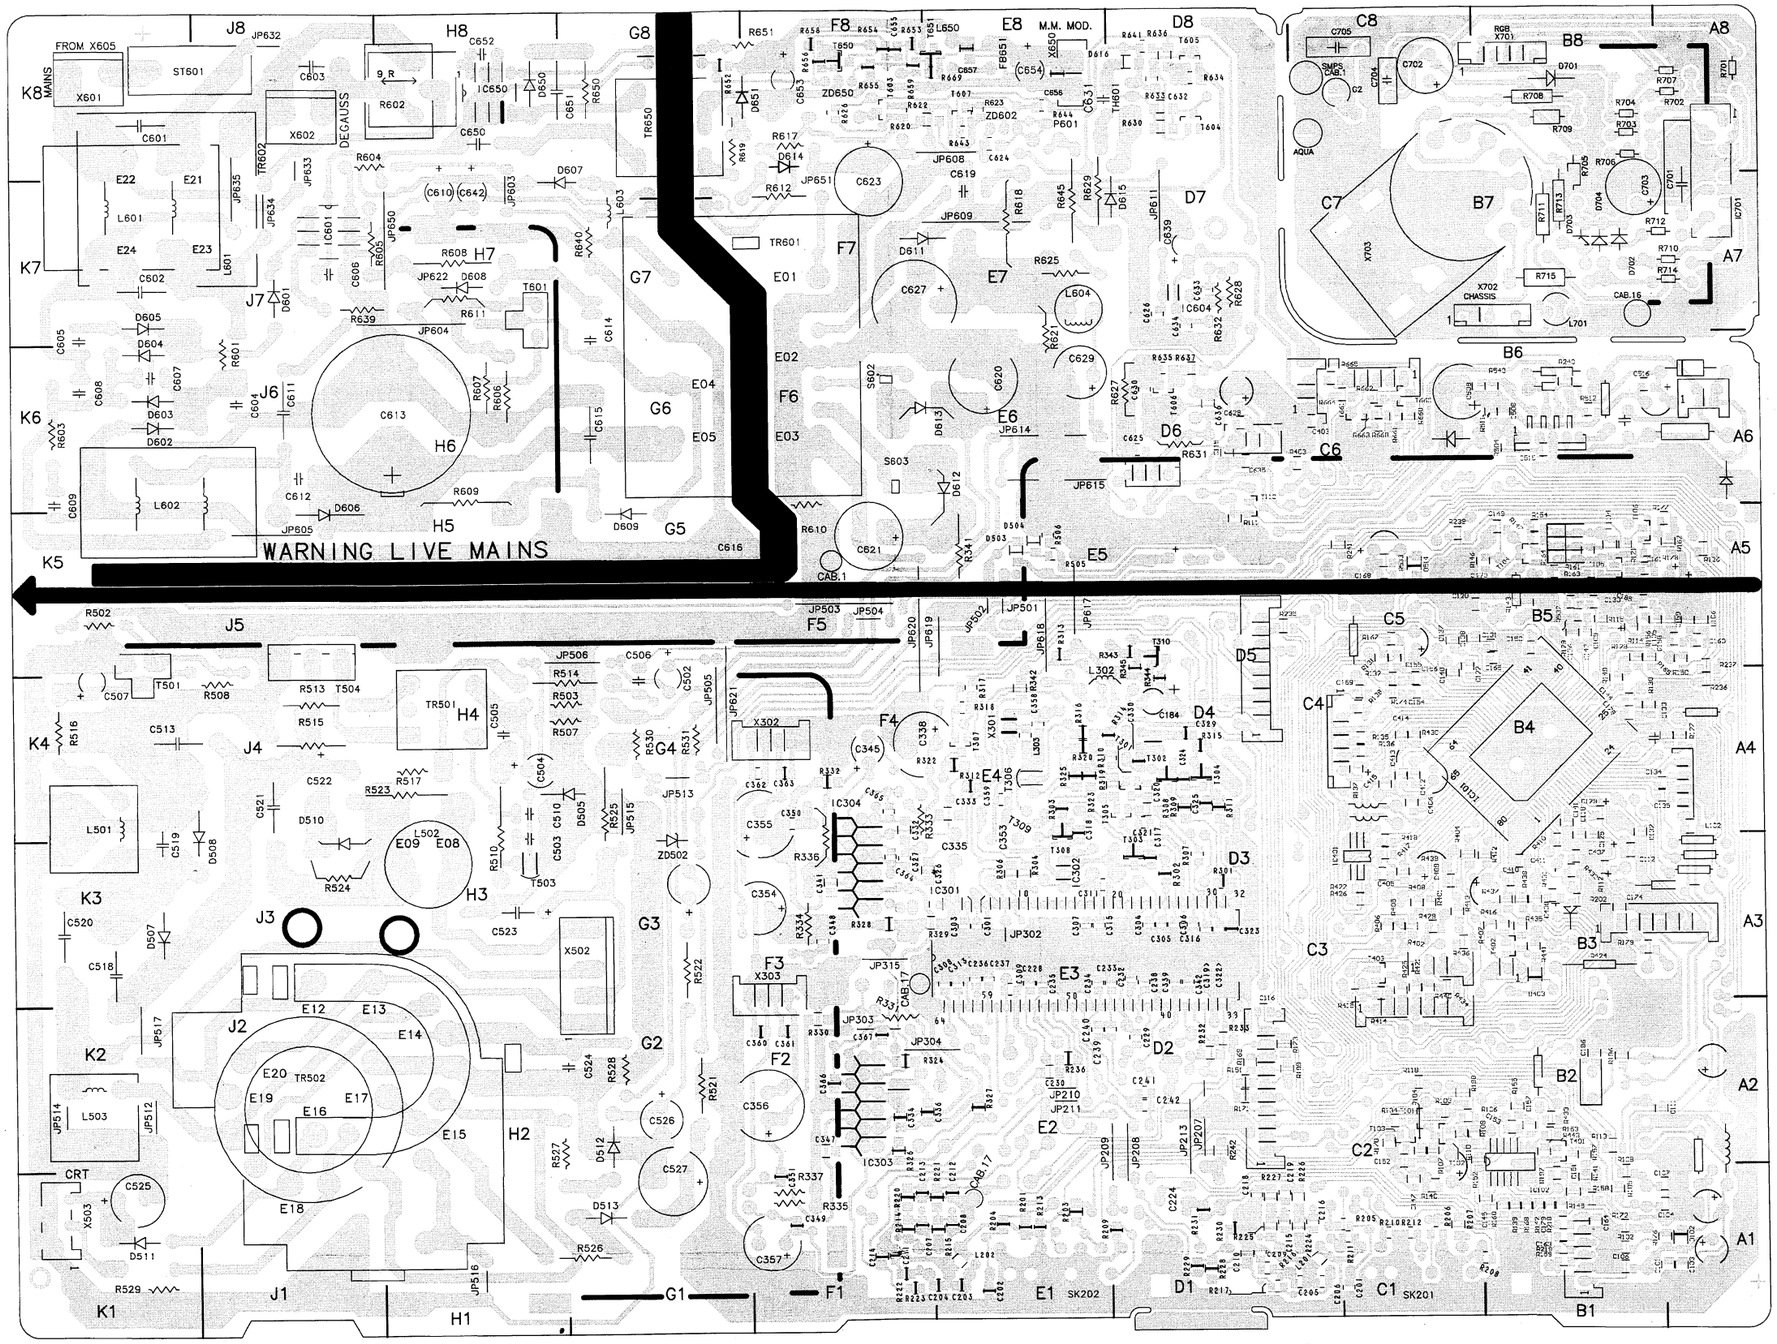
WARNING LIVE MAINS
FROM X605
X601
MAINS
ST601
X602
DEGAUSS
9_R
R602
TR650
TR602
TR601
TR501
TR502
T650
T601
T501
T504
T503
ZD650
ZD602
ZD502
P601
TH601
X650
FB651
M.M. MOD.
RGB X701
SMPS CAB.1
AQUA
X702 CHASSIS
CAB.16
L701
X703
L601
L602
L603
L604
L501
L502
L503
IC304
IC301
IC303
X302
X303
X502
X503
S602
S603
CAB.1
CAB.17
SK202
SK201
CRT
J1
J2
J3
J4
J5
J6
J7
J8
K1
K2
K3
K4
K5
K6
K7
K8
H1
H2
H3
H4
H5
H6
H7
H8
G1
G2
G3
G4
G5
G6
G7
G8
F1
F2
F3
F4
F5
F6
F7
F8
E1
E2
E3
E4
E5
E6
E7
E8
D1
D2
D3
D4
D5
D6
D7
D8
C1
C2
C3
C4
C5
C6
C7
C8
B1
B2
B3
B4
B5
B6
B7
B8
A1
A2
A3
A4
A5
A6
A7
A8

LINE FILTER MODUL (110° OPTIONAL)

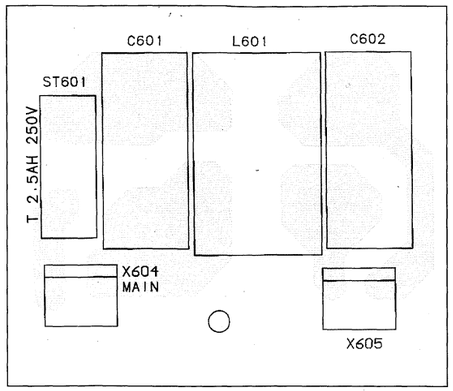

RGB SWITCHING MODUL (OPTIONAL)

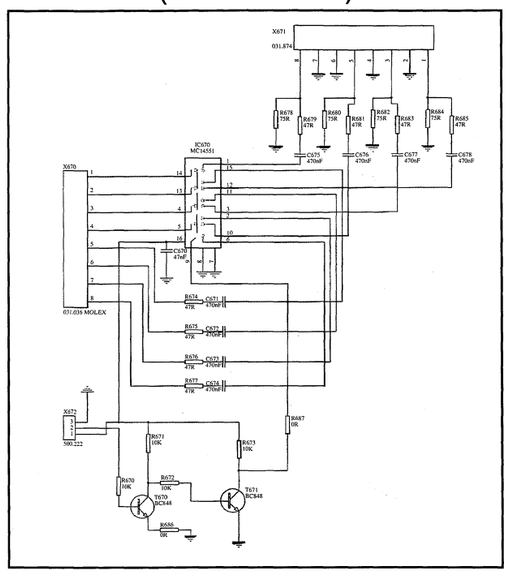

EXTERNAL SPEAKER MODUL (OPTIONAL)

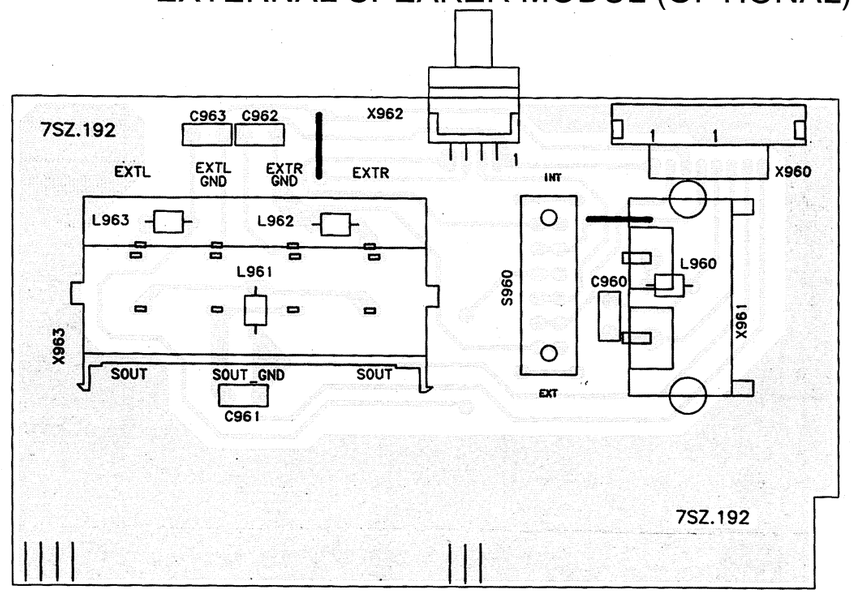

POWER INPUT/LOCAL CONTROL MODUL

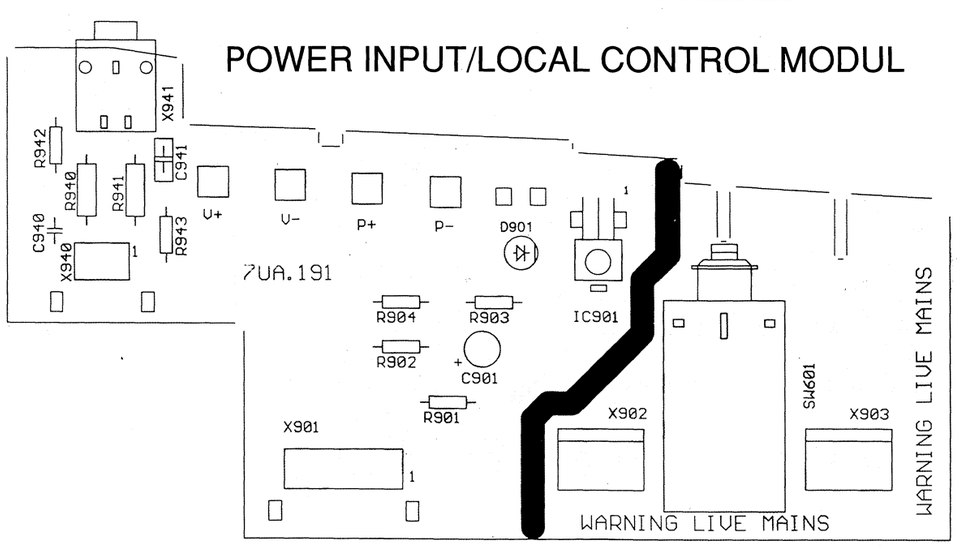

SEC LL' MODUL (OPTIONAL)

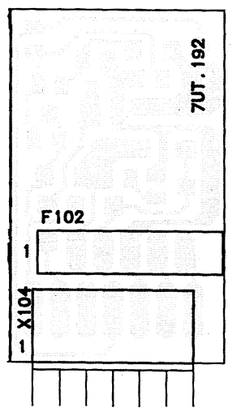

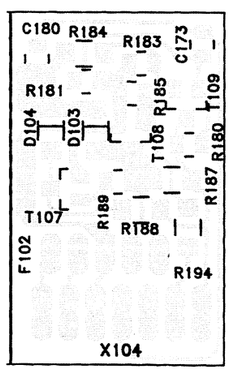

S-VIDEO/AV INPUT MODUL (OPTIONAL)

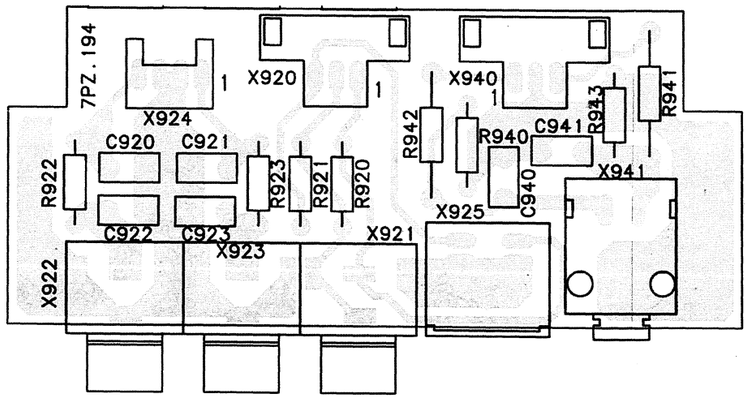

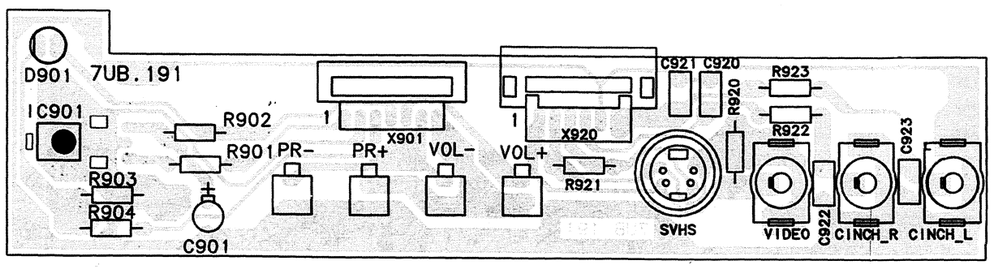

RGB SWITCHING MODUL (OPTIONAL)

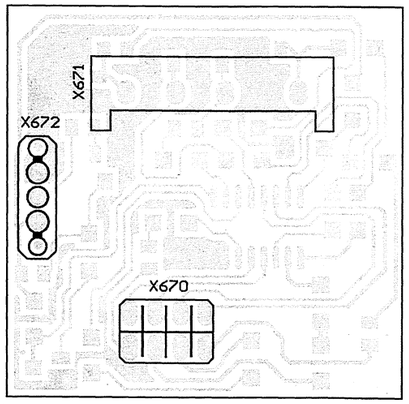

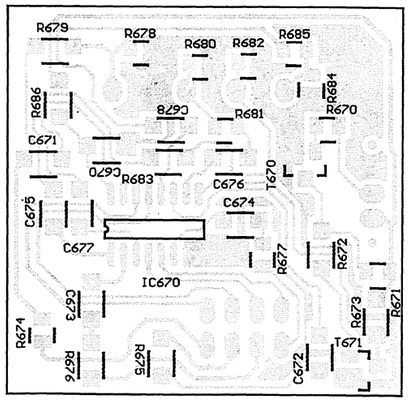

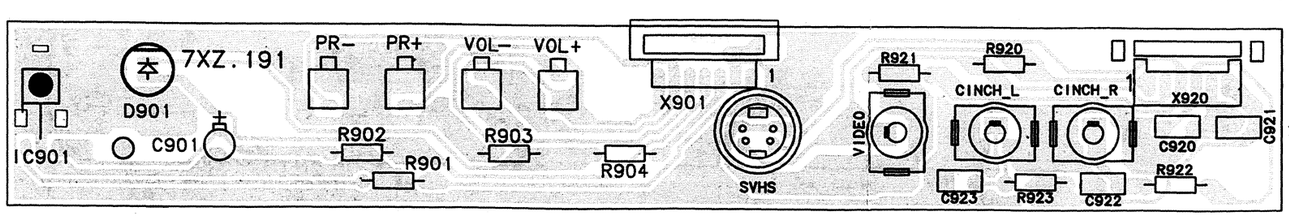

NOTE: S-VIDEO/AV INPUT, POWER INPUT/LOCAL CONTROL MODELS DIFFER FROM CABINETS.
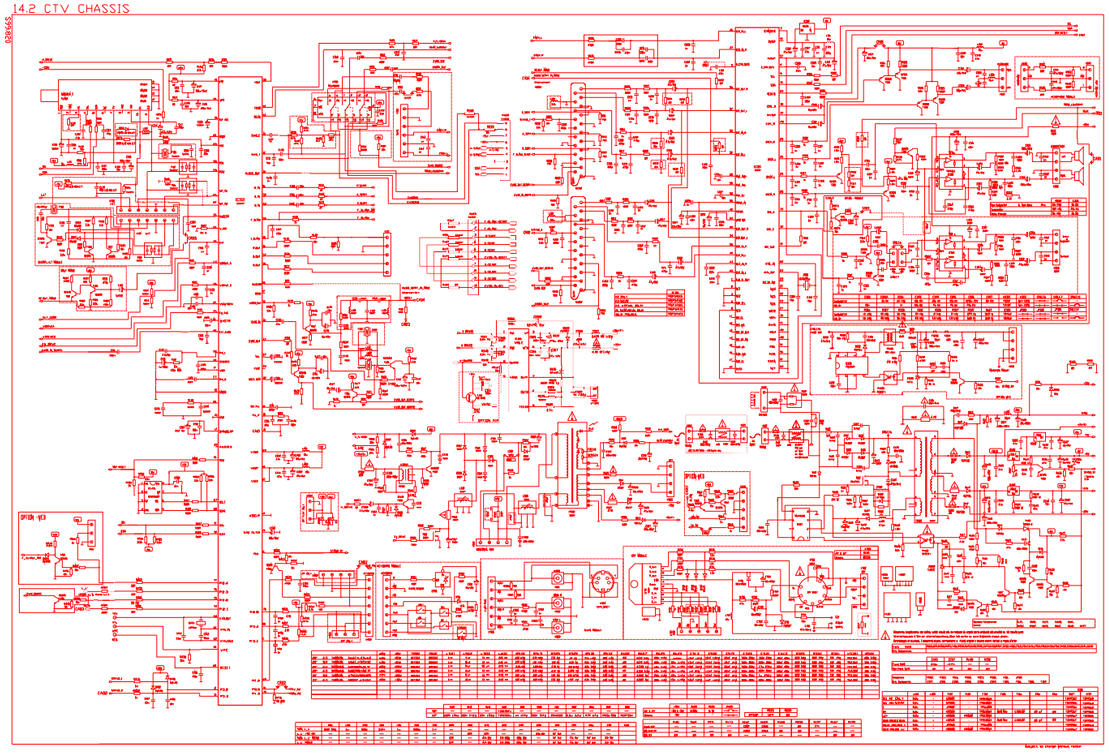
14.2 CTV CHASSIS